# Panasonic®

## Color Television

## Operating Instructions

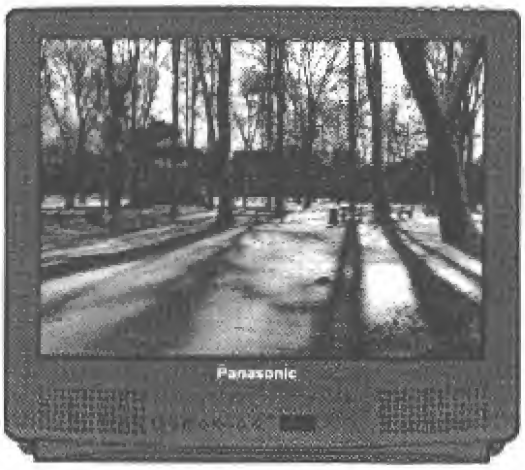


**CT–27G22**
**CT–27G22U**
**CT–27S21**

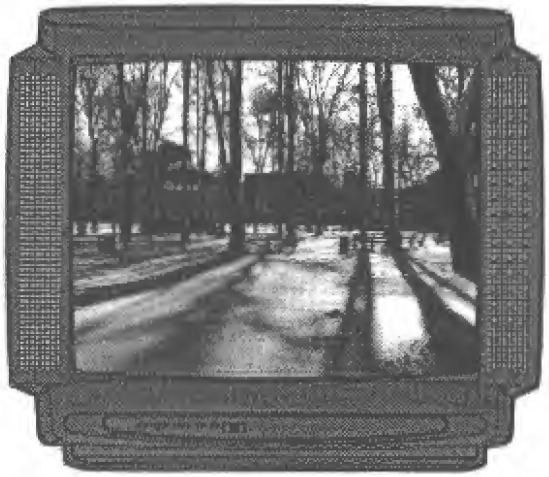

**CT–2768S**

Read these instructions completely before operating.
Contents subject to change without notice or obligation.

Copyright 1997 by Matsushita Electric Corporation of America. All rights reserved. Unauthorized copying and distribution is a violation of law.

Printed in U.S.A.
TQB2AA0143

# Safety Instructions

**WARNING**

**RISK OF ELECTRIC SHOCK DO NOT OPEN**

**WARNING: To reduce the risk of electric shock do not remove cover or back. No user–serviceable parts inside. Refer servicing to qualified service personnel.**

The lightning flash with arrow–head within a triangle is intended to tell the user that parts inside the product are a risk of electric shock to persons.

The exclamation point within a triangle is intended to tell the user that important operating and servicing instructions are in the papers with the appliance.

**Note To CATV System Installer:** This reminder is provided to call the CATV system installer's attention to Article 820–40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

## Safety Instructions For Television Receivers

1. Read and apply the operating instructions provided with your television receiver.
2. Read all of the instructions given here and retain them for later use.
3. Unplug this television receiver from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
4. Do not use attachments not recommended by the television receiver manufacturer as they may cause hazards.
5. Do not use this television receiver near water. For example: Avoid placing it near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, etc.
6. Do not place this television receiver on an unstable cart, stand, or table. The television receiver may fall, causing serious injury to a child or adult, and serious damage to the appliance. Use only with a cart or stand recommended by the manufacturer, or sold with the television receiver. Wall or shelf mounting should follow the manufacturer's instructions, and should use a mounting kit approved by the manufacturer.

6A. An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.

7. Slots and openings in the cabinet and the back or bottom are provided for ventilation, and to insure reliable operation of the television receiver and to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the television receiver on a bed, sofa, rug or other similar surface. This television receiver should never be placed near or over a radiator or heat register. This television receiver should not be placed in a built–in installation such as a bookcase unless proper ventilation is provided.
8. Operate only from the type of power source indicated on the marking label. If you are not sure of the type of power supplied to your home consult your television dealer or local power company. For television receivers designed to operate from battery power, refer to the operating instructions.
9. This television receiver is equipped with a polarized alternating–current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
10. Do not allow anything to rest on the power cord. Do not locate this television receiver where the cord will be abused by persons walking on it.
11. Follow all warnings and instructions marked on the television receiver.
12. Do not overload wall outlets and extension cords as this can result in fire or electric shock.
13. Never push objects of any kind into this television receiver through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the television receiver.

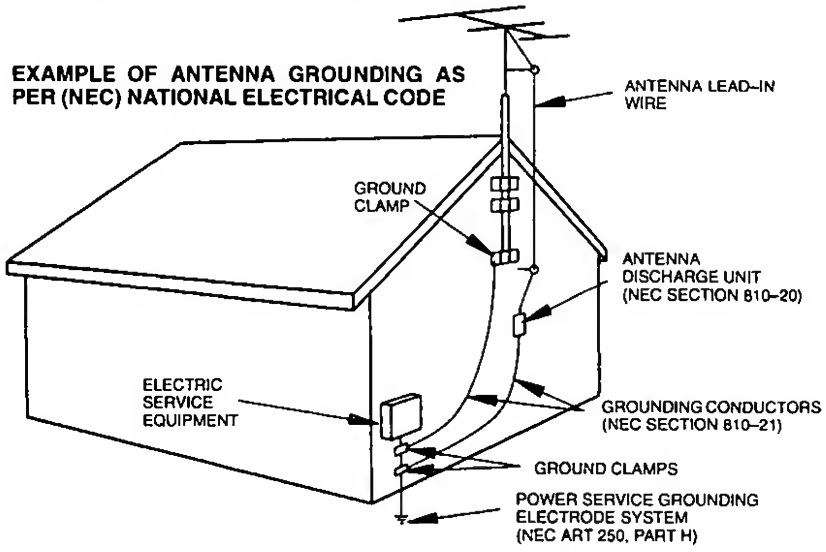
EXAMPLE OF ANTENNA GROUNDING AS PER (NEC) NATIONAL ELECTRICAL CODE
ANTENNA LEAD–IN WIRE
GROUND CLAMP
ANTENNA DISCHARGE UNIT (NEC SECTION 810–20)
ELECTRIC SERVICE EQUIPMENT
GROUNDING CONDUCTORS (NEC SECTION 810–21)
GROUND CLAMPS
POWER SERVICE GROUNDING ELECTRODE SYSTEM (NEC ART 250, PART H)

14. If an outside antenna is connected to the television equipment, be sure the antenna system is grounded so as to provide some protection against voltage surges and built up static charges. In the U.S. Section 810 of the National Electrical Code and in Canada Part 1 of the Canadian Electrical Code provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead–in wire to an antenna discharge unit, size of grounding conductors, location of antenna–discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. See Figure.
15. For added protection for this television receiver during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna. This will prevent damage to the receiver due to lightning and power–line surges.
16. An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.
17. Unplug this television receiver from the wall outlet, and refer servicing to qualified service personnel under the following conditions:
    a. When the power cord or plug is damaged or frayed.
    b. If liquid has been spilled into the television receiver.
    c. If the television receiver has been exposed to rain or water.
    d. If the television receiver does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the television receiver to normal operation.
    e. If the television receiver has been dropped or the cabinet has been damaged.
    f. When the television receiver exhibits a distinct change in performance – this indicates a need for service.
18. Do not attempt to service this television receiver yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
19. When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer that have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.
20. Upon completion of any service or repairs to this television receiver, ask the service technician to perform routine safety checks to determine that the television is in safe operating condition.
21. **WARNING: To prevent fire or shock hazard, do not expose this appliance to rain or moisture.**
22. **CAUTION:** TO PREVENT ELECTRIC SHOCK DO NOT USE THIS (POLARIZED) PLUG WITH A RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.

**NOTE:** This equipment is designed to operate in the U.S.A., Canada and other countries where the broadcasting system and AC house current is exactly the same as in the U.S.A. and Canada.

**Important Information Regarding Use of Video Games, Computers, DSS or Other Fixed Image Displays.**

The extended use of fixed image program material can cause a permanent "shadow image" on the picture tube. This background image is viewable on normal programs in the form of a stationary fixed image. This type of irreversible picture tube deterioration can be limited by observing the following steps:

A. Reduce the brightness/contrast setting to a minimum viewing level.
B. Do not display the fixed image for extended periods of time.
C. Turn the power off when not in actual use.

**NOTE:** The marking or retained image on the picture tube resulting from fixed image use is not an operating defect and as such is not covered by Warranty. This product is not designed to display fixed image patterns for extended periods of time.

# Specifications

| | |
|---|---|
| **Power Source:** | 120V, 60Hz, AC |
| **Channel Capability:** | 181 channels (See chart) |
| | VHF 2~13, UHF 14~69, Cable 125 channels |
| **Video Input Jacks:** | 1V p–p, 75 ohm, phono jack type |
| **Audio Input Jacks:** | 500mV rms 47K ohm |
| **To Audio AMP Jacks:** | 0~2.0V rms 4.7K ohm |
| **Stereo Sound** | |
| **Closed Caption Display** | |
| **Picture In Picture:** | 1 Tuner |

**Channel Capability Chart**

| BAND | CHANNELS |
|---|---|
| VHF | 12 |
| UHF | 56 |
| CABLE (Mid–Band) | 15 |
| CABLE (Super Band) | 14 |
| CABLE (Hyper Band) | 28 |
| CABLE (Ultra Band) | 56 |
| **TOTAL CHANNELS** | **181** |

Specifications are subject to change without notice or obligation.

# Introduction

## Congratulations on Your New Purchase

Your new video component features an all solid state chassis which is designed to give you many years of enjoyment. It was thoroughly tested and adjusted at the factory for best performance.

In order for you to take full advantage of your new video component, please read and follow the installation and operating instructions supplied with this product.

**Customer's Record**

The model and serial number of this product may be found on its back cover. You should note the model and serial number in the space provided and retain this book as a permanent record of your purchase to aid in identification in the event of theft or loss.

Model Number: _____ Serial Number: _____

# Table of Contents


**Safety Instructions** ..... 2
**Specifications** ..... 3
**Introduction** ..... 4
**Installation** ..... 5
Receiver Location ..... 5
Optional External Equipment Connections ..... 5
AC Power Supply Cord ..... 5
Remote Control Battery Installation ..... 5
Antenna/Cable Connections ..... 6
Other Video Equipment ..... 6
**Care and Cleaning** ..... 6
**Optional Equipment Connection and Operation** .. 7
To Audio AMP Connection ..... 7
Audio/Video Input Connection ..... 7
**PIP External Video And Antenna Connection** ..... 8
**Location of Controls Receiver** ..... 8
**Location of Controls Remote (For CT-2768S)** .... 9
**Remote Quick Reference Functional Key Chart (For CT-2768S)** ..... 10
**Location of Controls Remote (For CT-27G22/U)** . 12
**Location of Controls Remote (For CT-27S21)** ... 13
**Remote Quick Reference Functional Key Chart (For CT-27G22/U And CT-27S21)** ..... 14
**Special Functions** ..... 16
Recall Button ..... 16
R-Tune Button ..... 16
Multi Button (For CT-27G22/U and CT-27S21) .. 16
Multi Button (For CT-2768S) ..... 17
Cable Button (For CT-2768S) ..... 17
PIP (Picture in Picture) Button ..... 17
Swap Button ..... 18
Size Button ..... 18
Freeze Button ..... 18
Move Button ..... 18
**Main Menu Icons** ..... 19
Menu Language Selection ..... 19
Picture Adjustments ..... 20
Picture Norm ..... 20
Color, Tint, Brightness, Picture and Sharpness .. 20
Audio Adjustments ..... 21
Mode ..... 21
AI Sound ..... 21
Lock ..... 22
Lock Game Guard ..... 22
Unlock Game Guard ..... 22
Channel Caption ..... 23
Timer Features ..... 23
Sleep Timer ..... 23
Program Timer ..... 24
Set-Up Features ..... 25
Set Time ..... 25
Antenna (Ant) ..... 25
Auto Prog ..... 25
Manual Prog ..... 26
Auto Power On ..... 26
CC (Closed Caption) Mode ..... 26
**Programming The Universal Remote Control (For CT-2768S)** ..... 27
**VCR and Cable Converter Box Infrared Codes Index (For CT-2768S)** ..... 28
**Programming The Home Theater Remote (For CT-27S21)** ..... 29
**Infrared Remote Codes for Specific Components** 29
**Programming The Home Theater Remote (For CT-27G22/U)** ..... 30
**Infrared Remote Codes for Specific Components** 30
**VCR Infrared Codes Index (For CT-27G22/U and CT-27S21)** ..... 31
**Cable Converter Box and CD Players Infrared Codes Index** ..... 32
**Cassette Deck, Receivers, and Amplifiers Infrared Codes Index** ..... 33
**Laser Disc, DSS, and DVD Infrared Codes Index** ..... 34
**Troubleshooting Chart** ..... 35
Power Loss ..... 35

# Installation

## Receiver Location

This unit is intended to be used with an optional stand or entertainment center. Consult your dealer for available options.

Locate for comfortable viewing. Avoid placing where sunlight or other bright light (including reflections) will fall on the screen.

Use of some types of fluorescent lighting may reduce remote control transmitter range.

Adequate ventilation is essential to prevent internal component failure. Keep away from areas of excessive heat or moisture.

To insure optimum color purity do not position magnetic equipment (motors, fans, other speakers, etc.) nearby.

## Optional External Equipment Connections

The Video/Audio connections between components can be made with shielded video and audio cables. For best performance, video cables should utilize 75 ohm coaxial shielded wire. Cables are available from your dealer or electronic supply house.

Before you purchase any cables, be sure you know what type of output and input connectors your various components require. Also determine the length of cable you'll need.

## AC Power Supply Cord

**CAUTION:** TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT OF AC OUTLET AND FULLY INSERT. DO NOT USE THIS (POLARIZED) PLUG WITH A RECEPTACLE OR OTHER OUTLET UNLESS THE BLADE CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.

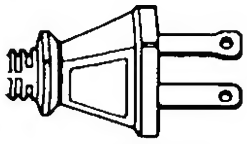

Polarized Plug

## Remote Control Battery Installation

Batteries: Use two "AA" batteries.

1. Remove the battery compartment cover on back of the remote.
2. Install the batteries in the battery compartment. (Polarity (+) or (–) must be correct.)
3. Reattach the battery cover.

| *Helpful Hints:* |
| --- |
| For frequent Remote Control users, replace old batteries with Alkaline batteries for longer life. |

### Precaution on Battery Use

Incorrect installation can cause battery leakage and corrosion that will damage the Remote Control Transmitter.

**Observe the Following Precautions:**

1. Batteries must be replaced as a pair.
2. Do not combine a used battery with a new one.
3. Do not mix battery types (Example: "Zinc Carbon" with "Alkaline").
4. Do not attempt to charge, short–circuit, disassemble, heat or burn used batteries.
5. Battery replacement is necessary when Remote Control reacts sporadically or stops operating the Receiver.

| *Helpful Hints:* |
| --- |
| Whenever you remove the batteries to replace them, **you may need to reset the Remote Control Infrared Codes.** We recommend that you initially record the codes in the Infrared Remote Codes for Specific Components section, prior to setting up the remote. |

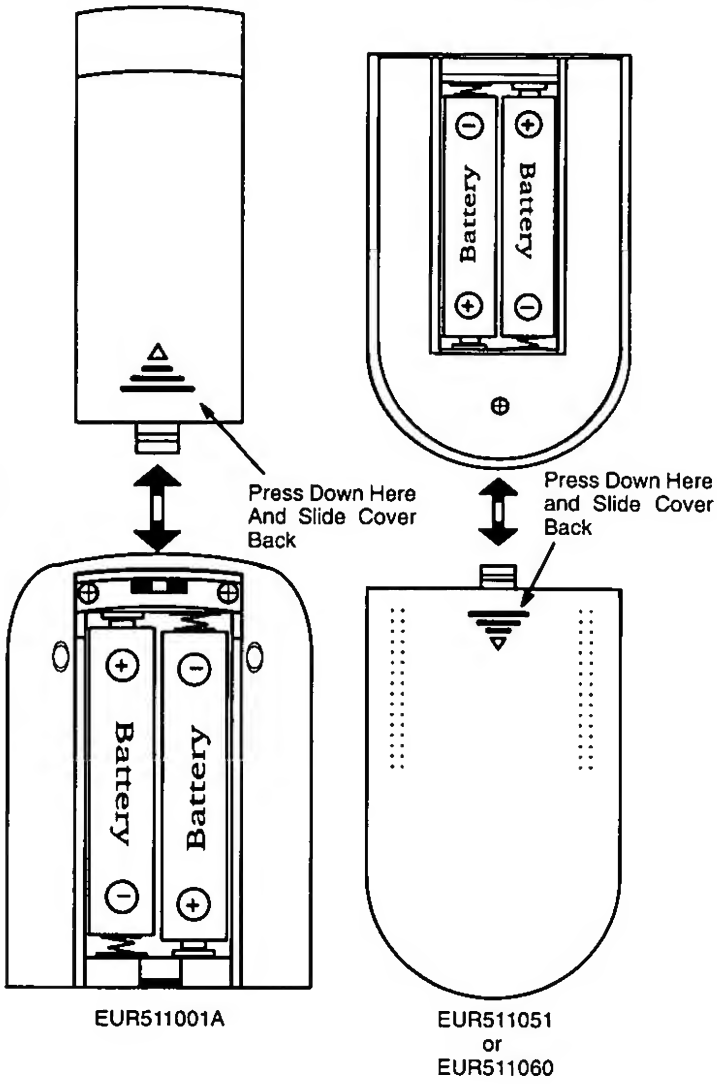


EUR511001A

EUR511051
or
EUR511060

## Installation (cont.)

## Antenna/Cable Connections

**Antenna Connection** – For proper reception of VHF/UHF channels, an external antenna is required. For best reception an outdoor antenna is recommended. **Antenna Mode must be set to TV.** (Refer to Antenna Mode section.)

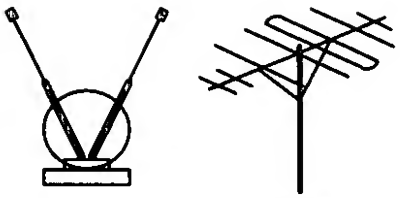


**Typical VHF/UHF Antenna**

**Incoming Cable from Home Antenna**

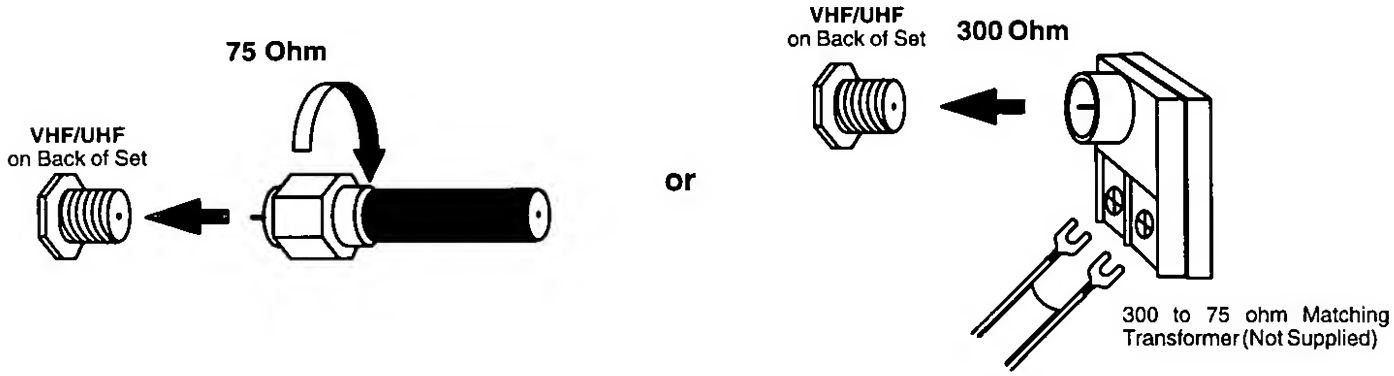


**Cable Connection** – For reception of cable channels, connect the cable supplied by your local cable company. **Antenna Mode must be set to CABLE.** (Refer to Antenna Mode section.)

**Incoming Cable from Cable Company**

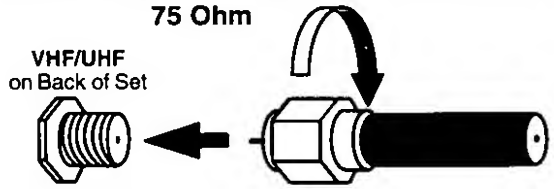


**NOTE:** Certain cable systems offset some channels to reduce interference or have Premium (scrambled) channels. A cable converter box is required for proper reception. Check with your local Cable company for compatibility requirements.

## Other Video Equipment

VCRs, Video Disc Players, Computers, TV games, and DSS equipment can also be connected to the antenna input connection.

# Care and Cleaning

### Picture Tube (Turn set off)

Use a mild soap solution or window cleaner and a clean cloth. DO NOT USE ABRASIVE CLEANERS. Avoid excessive moisture and wipe dry.

### Plastic Cabinets

Wipe the cabinet with a soft cloth dampened with water or a mild detergent solution and wipe dry with a soft clean cloth. Avoid excessive moisture. Do not use benzene, thinners or other petroleum based cleaners.

### Wood Cabinets

When dusting or polishing the cabinet, use a clean soft cloth and stroke straight with the grain. An occasional coat of furniture polish will help preserve the finish. Do not use benzene, thinners or other petroleum based cleaners. Do not place objects made of plastic or rubber directly on top of the cabinet. A chemical reaction could result causing permanent marring of the finish.

### Remote Control Transmitter

Do not use benzene, thinners or other petroleum based cleaners to clean the Remote Control Transmitter. To clean, wipe with a soft cloth slightly moistened with a mild detergent and then wipe dry with a soft clean cloth.

# Optional Equipment Connection and Operation

## To Audio AMP Connection

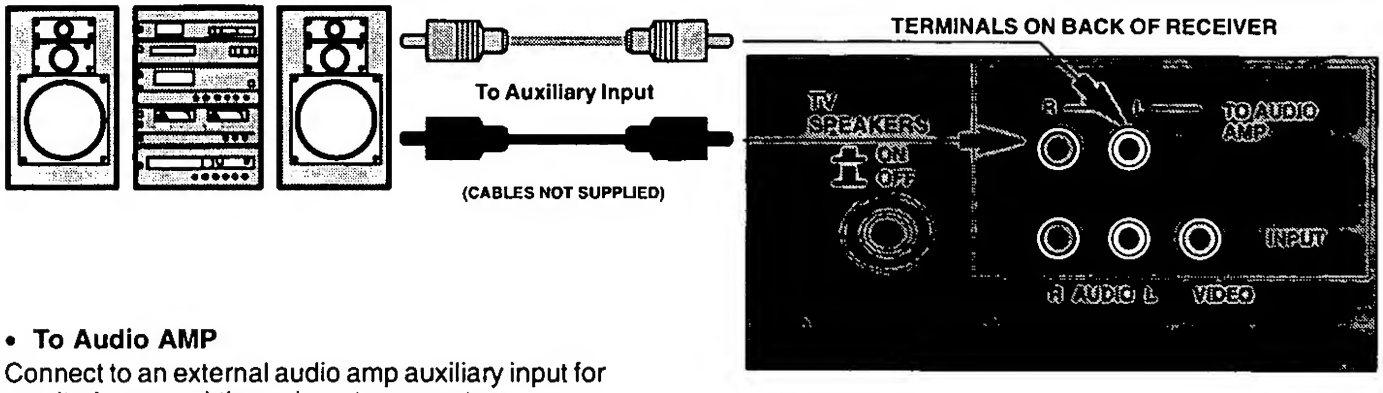


- **To Audio AMP**

Connect to an external audio amp auxiliary input for monitoring sound through a stereo system.

**NOTE:** "TO AUDIO AMP" terminals cannot be used for external speakers.

**Adjustment** – When an audio amp is connected to "TO AUDIO AMP" terminals as shown:

1. Press the TV SPEAKERS button (located on back of Receiver) to turn INT. SPEAKERS "ON" ( ).
2. Set volume of audio amp to near minimum.
3. Adjust volume of TV to desired listening level.
4. Adjust volume of audio amp to match the level of TV.
5. Press the TV SPEAKERS button (located on back of Receiver) to turn INT. SPEAKERS "OFF" ( ).
6. Volume and mute can now be controlled by the TV Remote Control.

## Audio/Video Input Connection

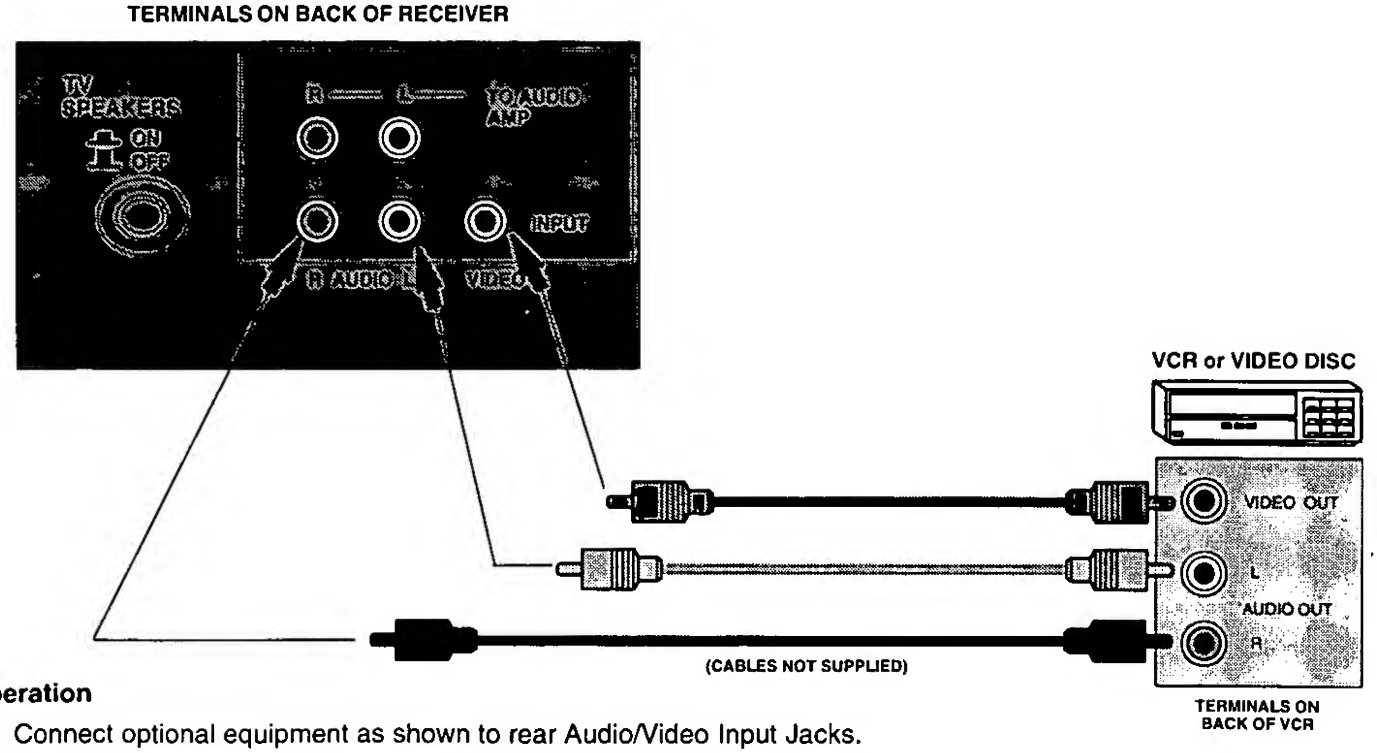


**Operation**

1. Connect optional equipment as shown to rear Audio/Video Input Jacks.
2. Select the Video mode by pressing the TV/VIDEO button.
3. Operate optional equipment as instructed in Optional Equipment manual.

# Picture in Picture External Video and Antenna Connection

This Receiver has the "PICTURE IN PICTURE" feature. For the proper operation of this feature a second video source is required (such as a VCR). We recommend that you make your antenna and External Video connection as shown below when a second video source is available.

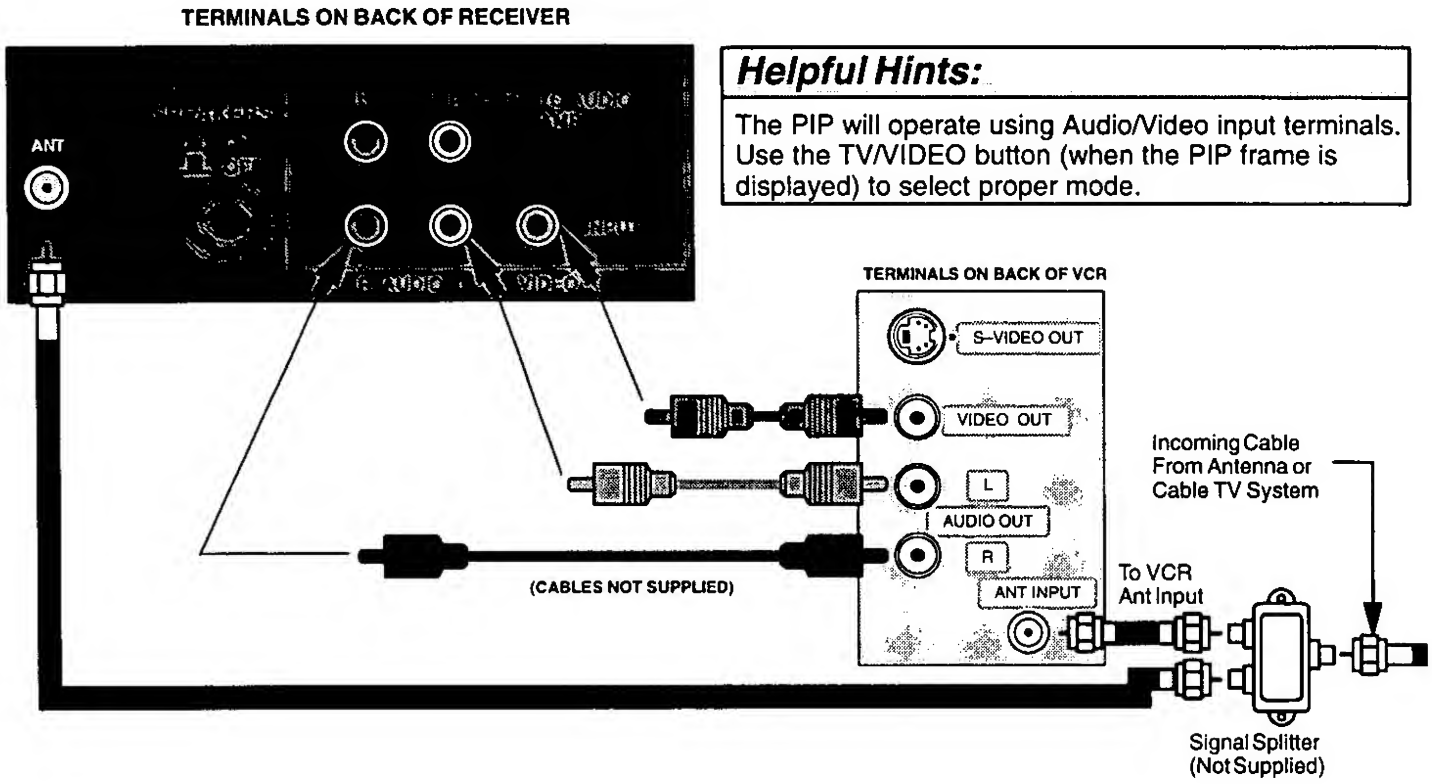


### *Helpful Hints:*

The PIP will operate using Audio/Video input terminals. Use the TV/VIDEO button (when the PIP frame is displayed) to select proper mode.

# Location of Controls Receiver

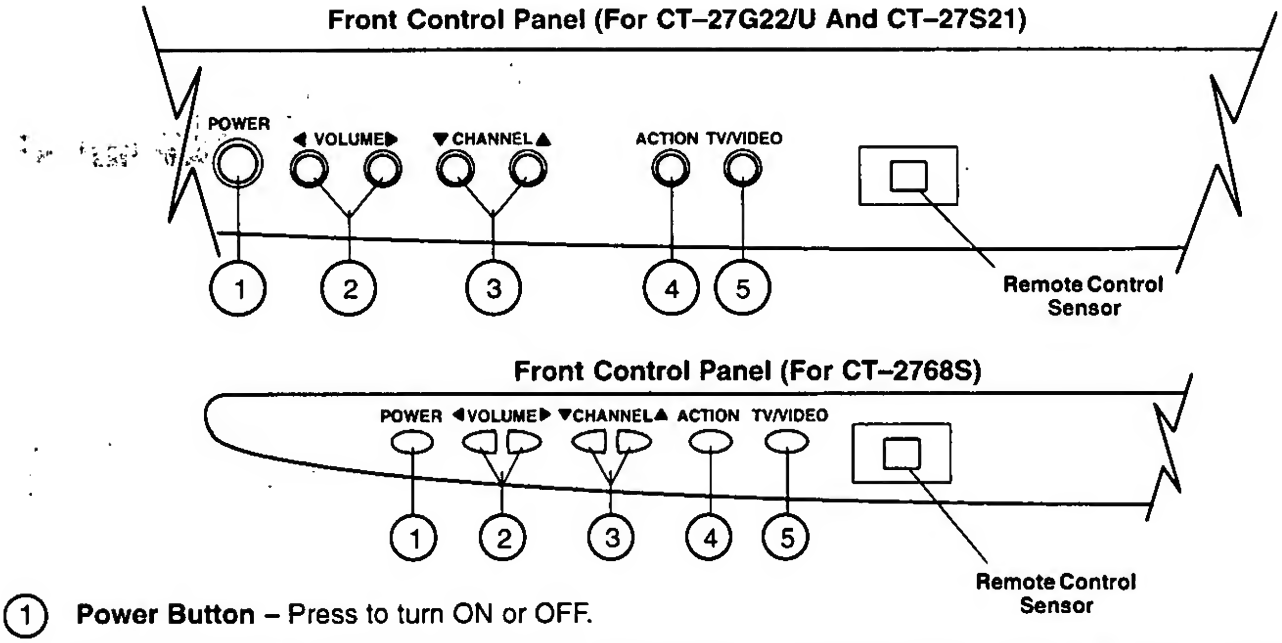


(1) **Power Button** – Press to turn ON or OFF.

(2) **Volume Buttons** – Press to adjust Sound Level. Press to adjust Audio Menus, Video Menus and select operating features when menus are displayed.

(3) **Channel Buttons** – Press to select programmed channels. Press to highlight desired features when menus are displayed.

(4) **Action Button** – Press to display Main Menu and access On Screen feature and Adjustment Menus.

(5) **TV/Video Button** – Press to select TV or Video Input.

# Location of Controls
## (Remote For CT–2768S)

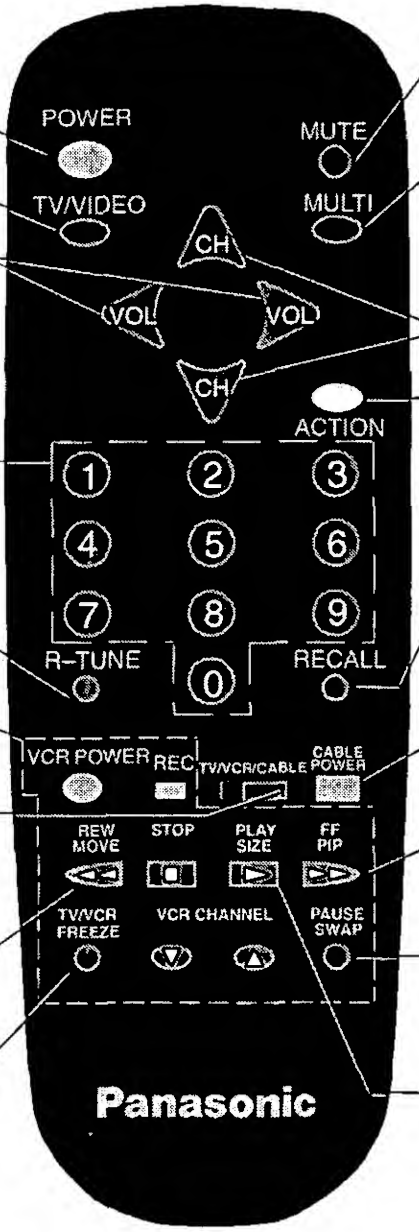


EUR511001A

**Power Button**
Press to turn ON or OFF.

**TV/Video Button**
Press to select TV Video Input, for the Main Picture or the PIP frame (when the PIP frame is displayed).

**Volume Buttons**
Press to adjust TV sound level. Use with Channel buttons to navigate in menus.

**Keypad Buttons**
Press desired channel number to randomly access any channel.

**R–Tune (Rapid Tune) Button**
Press to switch to the previous channel.

**VCR Function Buttons**
Programmable to operate many brands of VCR's.

**TV/VCR/CABLE Switch**
This switch is used to select the proper mode when programming Remote Control Infrared codes or operating the TV or external equipment (VCR or Cable Converter box).

**PIP Move Button**
Press to position PIP frame to any corner of the Main Picture (when PIP frame is displayed).

**PIP Freeze Button**
Press to stop action in the Main Picture or PIP frame (when the PIP frame is displayed).

**Mute Button**
Press to mute sound. A second press resumes sound. Press also to access and delete Closed Caption.

**Multi Button**
Programmable to operate up to six Remote Control Function buttons simultaneously.

**Channel Buttons**
Press to select channels. Use with Volume buttons to navigate in menus.

**Action Button**
Press to display Main Menu and access or exit On Screen feature and Adjustment Menus.

**Recall Button**
Press to display Time, status of Sleep Timer, Channel, Video Mode, Channel Caption (Station Identifier) and Audio Mode.

**Cable Power Button** – Programmable to operate selected CATV converter boxes.

**PIP (Picture In Picture) Button**
Press to display the PIP frame, press again to remove PIP frame.

**PIP Swap Button**
Press to interchange PIP frame with Main Picture (when the PIP frame is displayed).

**PIP Size Button**
Press to select size of PIP frame (when the PIP frame is displayed).

# Remote Control
# Quick Reference Functional Key Chart
## (For CT-2768S)

| KEY | OPERATES | FUNCTION |
|---|---|---|
| POWER | **TV** | Turns TV On and Off |
| MUTE | **TV** | Mutes TV Audio |
| TV/VIDEO | **TV** | Selects the TV Input Mode |
| MULTI | **ALL COMPONENTS** | Programmable Button that can operate up to six (6) Remote Functions at once |
| ACTION | **TV** | Activates TV Menus |
| CH, VOL, VOL, CH | **TV**<br>**CABLE** | Channel Up/Down, Menu Navigation<br>Channel Up/Down |
| | **TV**<br>**CABLE**<br>**VCR** | Volume Up/Down, Menu Navigation<br>Search for Infrared Code when Programming Remote |
| 1 2 3 4 5 6 7 8 9 0 | **TV**<br><br><br><br>**VCR**<br>**CABLE** | Selects Channel<br>Selects Code in Game Guard Menu<br>Selects Channel in Channel Caption Menu<br>Selects Channel in Timer Menu<br><br>Selects Infrared Code when Programming Remote<br>Selects Infrared Code when Programming Remote |
| R-TUNE | **TV** | Switches Between Two (2) Channels |
| RECALL | **TV** | Displays Channel (or Video Mode), Channel Caption, Time, Sleep Time, and Audio Mode |

# Remote Control
# Quick Reference Functional Key Chart (cont.)
## (For CT–2768S)

| KEY | OPERATES | FUNCTION |
|---|---|---|
| TV/VCR/CABLE | **TV**<br>**VCR**<br>**CABLE** | TV Mode Selection for Remote Control<br>VCR Mode Selection for Remote Control<br>CATV Mode Selection for Remote Control |
| CABLE POWER | **CABLE** | Turns Cable On and Off |
| VCR POWER | **VCR** | Turns VCR On and Off |
| REC | **VCR** | Record |
| STOP | **VCR** | Stop |
| VCR CHANNEL | **VCR** | VCR Channel Up/Down |
| FF PIP | **TV**<br>**VCR** | PIP ON/Off<br>Fast Forward |
| PLAY SIZE | **TV**<br>**VCR** | PIP Size<br>Play |
| REW MOVE | **TV**<br>**VCR** | PIP Move<br>Rewind |
| PAUSE SWAP | **TV**<br>**VCR** | PIP Swap<br>Pause |
| TV/VCR FREEZE | **TV**<br>**VCR** | PIP Freeze<br>Selects TV/VCR Mode |

# Location of Controls Remote (For CT-27G22/U)

## Basic Remote Control Functions

The following is an overview of the Remote Control unit **for television operation. Ensure the TV mode is selected by initially pressing** TV .

**Multi Button**
Programmable to operate up to six Remote Control Function buttons simultaneously.

**Power Button**
Press to turn ON or OFF.

**Mode Selection Buttons**
Select the operation mode for the remote control.

**Volume Buttons**
Press to adjust TV sound level. Use with Channel buttons to navigate in menus.

**Action Button**
Press to display Main Menu and access or exit On Screen feature and Adjustment Menus.

**R-Tune (Rapid Tune) Button**
Press to switch to the previous channel.

**PIP Move Button**
Press to position PIP frame to any corner of the Main Picture (when PIP frame is displayed).

**PIP Freeze Button**
Press to stop action in the Main Picture or PIP frame (when the PIP frame is displayed).

**PIP Size Button**
Press to select size of PIP frame (when the PIP frame is displayed).

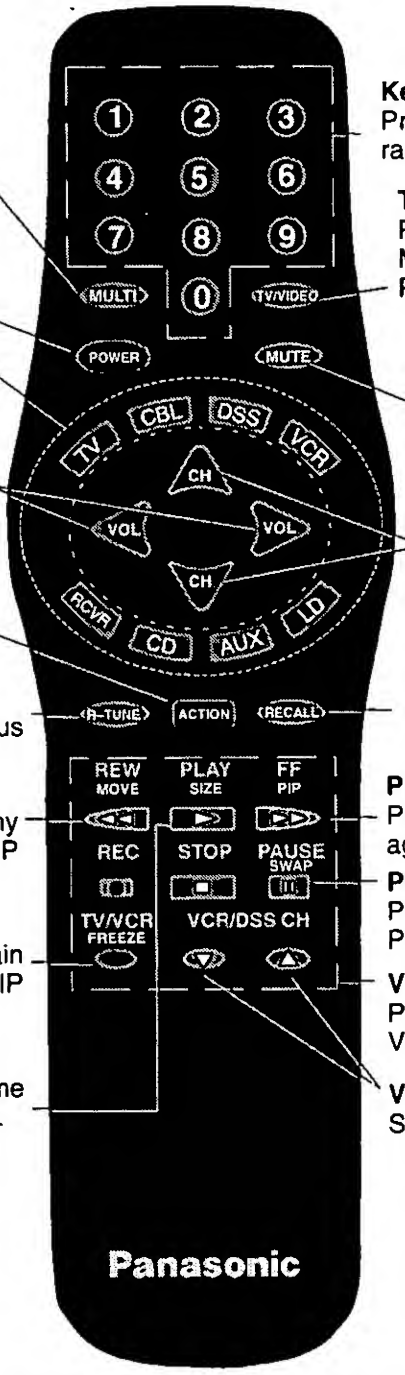


**Home Theater Remote Control**
**EUR511051**

**Keypad "0 through 9" Buttons**
Press desired channel number to randomly access any channel.

**TV/Video Button**
Press to select TV or Video Input, for the Main Picture or the PIP frame (when the PIP frame is displayed).

**Mute Button**
Press to mute sound. A second press resumes sound.

**Channel Buttons**
Press to select channels. Use with Volume buttons to navigate in menus.

**Recall Button**
Press to display Time, status of Sleep Timer, Channel, Video Mode, Channel Caption (Station Identifier) and Audio Mode.

**PIP (Picture In Picture) Button**
Press to display the PIP frame, press again to remove PIP frame.

**PIP Swap Button**
Press to interchange PIP frame with Main Picture (when the PIP frame is displayed).

**VCR Function Buttons**
Programmable to operate many brands of VCR's.

**VCR/DSS Channel Buttons**
Select VCR or DSS Up/Down channels.

***Helpful Hints:***

If the selected component does not respond to the remote control, ensure that the proper mode is selected. **First**, press the **Mode Selection Button** that corresponds to that component. For example, after first pressing the TV Mode Button, the remote will remain in the TV mode for the following commands. If a different mode button is pressed while operating the television, the TV mode button must be pressed again to enable the TV mode condition.

**Note:**
For more information on the Remote Control, please refer to the Remote Control Quick Reference Functional Key Chart.

# Location of Controls Remote (For CT-27S21)

## Basic Remote Control Functions

The following is an overview of the Remote Control unit **for television operation. Ensure the TV mode is selected by initially pressing** TV .

**Multi Button**
Programmable to operate up to six Remote Control Function buttons simultaneously.

**Power Button**
Press to turn ON or OFF.

**Mode Selection Buttons**
Select the operation mode for the remote control.

**Volume Buttons**
Press to adjust TV sound level. Use with Channel buttons to navigate in menus.

**Action Button**
Press to display Main Menu and access or exit On Screen feature and Adjustment Menus.

**R-Tune (Rapid Tune) Button**
Press to switch to the previous channel.

**PIP Move Button**
Press to position PIP frame to any corner of the Main Picture (when PIP frame is displayed).

**PIP Freeze Button**
Press to stop action in the Main Picture or PIP frame (when the PIP frame is displayed).

**PIP Size Button**
Press to select size of PIP frame (when the PIP frame is displayed).

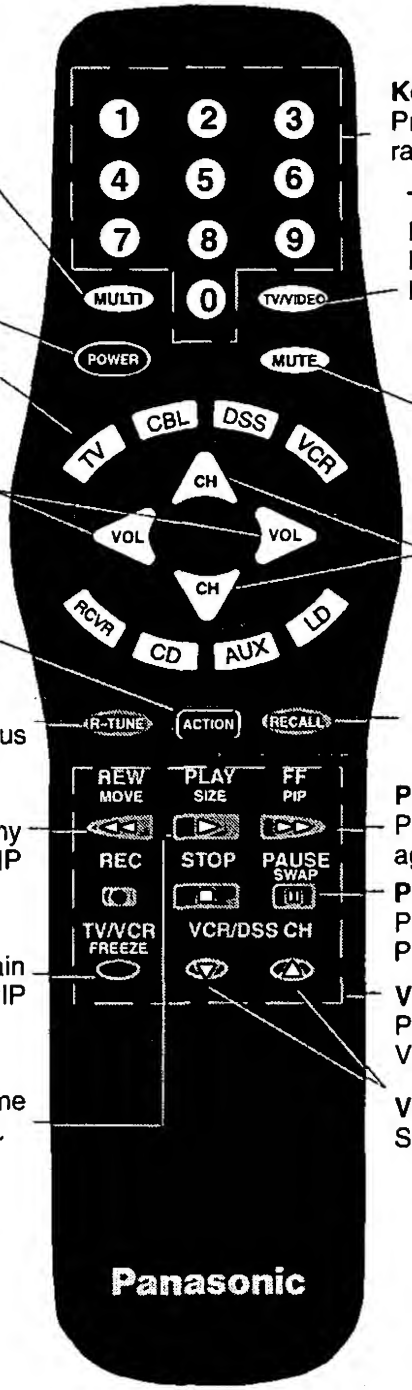


**Home Theater Remote Control**
**EUR511060**

**Keypad "0 through 9" Buttons**
Press desired channel number to randomly access any channel.

**TV/Video Button**
Press to select TV or Video Input, for the Main Picture or the PIP frame (when the PIP frame is displayed).

**Mute Button**
Press to mute sound. A second press resumes sound.

**Channel Buttons**
Press to select channels. Use with Volume buttons to navigate in menus.

**Recall Button**
Press to display Time, status of Sleep Timer, Channel, Video Mode, Channel Caption (Station Identifier) and Audio Mode.

**PIP (Picture In Picture) Button**
Press to display the PIP frame, press again to remove PIP frame.

**PIP Swap Button**
Press to interchange PIP frame with Main Picture (when the PIP frame is displayed).

**VCR Function Buttons**
Programmable to operate many brands of VCR's.

**VCR/DSS Channel Buttons**
Select VCR or DSS Up/Down channels.

**Note:**
For more information on the Remote Control, please refer to the Remote Control Quick Reference Functional Key Chart.

***Helpful Hints:***

If the selected component does not respond to the remote control, ensure that the proper mode is selected. **First**, press the **Mode Selection Button** that corresponds to that component. For example, after first pressing the TV Mode Button, the remote will remain in the TV mode for the following commands. If a different mode button is pressed while operating the television, the TV mode button must be pressed again to enable the TV mode condition.

# Remote Control
# Quick Reference Functional Key Chart
## (For CT–27G22/U And CT–27S21)

| KEY | MODE | FUNCTION |
|---|---|---|
| 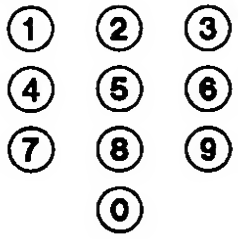 | **TV**<br>**VCR, VCR 2**<br>**CABLE, DSS** | Selects Channel<br>Selects Channel<br>Selects Channel |
| | **RECEIVER/AMPLIFIER** | ④ Selects Tuner<br>⑤ Selects CD Player<br>⑥ Selects Tape Cassette Player<br>⑦ VCR 1<br>⑧ VCR 2 |
| | **CD PLAYER** | Selects Track Number |
| | **LD PLAYER** | Selects Track Number |
| | **ALL COMPONENTS** | Programmable Button That Can Operate Up To Six (6) Remote Functions At Once |
| | **TV** | Selects the TV Input Mode |
| | **ALL COMPONENTS** | Turns On and Off Selected Components |
| | **TV, DSS, VCR, VCR 2 LDP**<br>**CABLE**<br>**RECEIVER/AMPLIFIER** | Mutes TV Audio<br>Mutes Audio<br>Mutes Audio |
| | **TV** | TV Mode Selection for Remote Control |
| | **CABLE** | Cable Mode Selection for Remote Control |
| | **DSS (DIGITAL SATELLITE SYSTEM)** | DSS Mode Selection for Remote Control |
| | **VCR, VCR 2** | VCR Mode Selection for Remote Control |
| | **RECEIVER/AMPLIFIER** | Receiver/Amplifier Mode Selection for Remote Control |
| | **COMPACT DISC** | CD Mode Selection for Remote Control |
| | **CASSETTE DECK, VCR 2, DVD** | AUX Mode Selection for Remote Control<br>Enables User to Operate a Cassette Deck, Digital Video Disc or Second VCR |
| | **LASER DISC PLAYER** | LD Mode Selection for Remote Control |
| | **TV**<br>**CABLE**<br>**DSS**<br>**LDP**<br>**CD**<br>**RECEIVER/AMPLIFIER**<br>**DVD** | Channel Up/Down, Menu Navigation<br>Channel Up/Down<br>DSS Guides and Menu Navigation<br>Skip<br>FF, REW<br>Preset or Tuning Frequency<br>Skip FWD/Skip REW |
| | **TV**<br>**CABLE**<br>**DSS**<br><br>**RECEIVER/AMPLIFIER**<br>**VCR, VCR 2**<br>**LDP** | Volume Up/Down, Menu Navigation<br>Volume Up/Down<br>DSS Guides and Menu Navigation, Also Switches Between Normal Audio and SAP<br>Volume Up/Down<br>TV Volume Up/Down<br>TV Volume Up/Down |

# Remote Control
# Quick Reference Functional Key Chart (cont.)
## (For CT–27G22/U And CT–27S21)

| KEY | MODE | FUNCTION |
|---|---|---|
| R-TUNE | **LDP** | A/B Repeat |
| | **TV** | Switches Between Two (2) Channels |
| | **CABLE** | Switches Between Two (2) Channels |
| | **VCR, VCR 2** | Switches Between Two (2) Channels |
| | **DSS** | Switches Between Two (2) Channels |
| | **RECEIVER/AMPLIFIER** | Switches between AM and FM |
| | **CD** | Selects Next Disc |
| | **AUDIO TAPE RECORDER** | Selects Audio Tape Recorder A or B |
| ACTION | **TV** | Activates TV Menus |
| | **DSS** | Acts as Menu Button for DSS |
| RECALL | **TV** | Displays Channel, Sleep Time,Channel Caption, Time, and Audio Mode |
| | **DSS** | Displays Current DSS Settings |
| | **VCR, VCR 2** | Displays Current VCR Settings |
| | **LDP** | Displays Current LDP Settings |
| REW MOVE ◁◁ | **TV** | PIP Move |
| | **DSS** | DSS Guide |
| | **VCR, VCR 2** | Rewind |
| | **LDP** | Rewind |
| | **TAPE** | Rewind |
| | **CD** | Selects Previous Track |
| | **DVD** | Rewind |
| PLAY SIZE ▷ | **TV** | PIP Size |
| | **DSS** | Enter/Select |
| | **VCR, VCR 2** | Play |
| | **LDP** | Play |
| | **TAPE** | Play (in Normal Direction) |
| | **CD** | Play |
| | **DVD** | Play |
| FF PIP ▷▷ | **TV** | PIP On/Off |
| | **DSS** | Exit/Clear |
| | **VCR, VCR 2** | Fast Forward |
| | **LDP** | Fast Forward |
| | **TAPE** | Fast Forward |
| | **CD** | Selects Next Track |
| | **DVD** | Fast Forward |
| REC ● | **DSS** | One Touch Record In DSS Mode |
| | **VCR, VCR 2** | Record |
| | **TAPE** | Record |
| | **CABLE** | VCR Record |
| STOP □ | **DVD** | Stop |
| | **VCR, VCR 2** | Stop |
| | **LDP** | Stop |
| | **TAPE** | Stop |
| | **CD** | Stop |
| | **CABLE** | VCR Stop |
| PAUSE SWAP ▯▯ | **DVD** | Pause |
| | **TV** | PIP Swap |
| | **VCR, VCR 2** | Pause |
| | **LDP** | Pause |
| | **TAPE** | Pause |
| | **CD** | Pause |
| | **CABLE** | VCR Pause |
| TV/VCR FREEZE | **TV** | PIP Freeze |
| | **VCR, VCR 2** | Selects TV/VCR Mode |
| | **DSS** | Selects TV/DSS Mode |
| | **CABLE** | Selects TV/VCR Mode |
| VCR/DSS CH ▽ △ | **VCR, VCR 2** | Channel Up/Down |
| | **DSS** | Channel Up/Down |

# Special Functions

## Recall Button

Press the RECALL button to review:

① Audio Mode status
② CH number or Video Input selected
③ Channel Caption (Station Identifier)
④ Clock time
⑤ Sleep Timer status

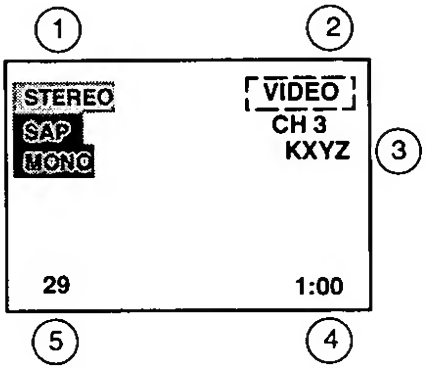


## R-Tune Button

Pressing the R-TUNE (RAPID TUNE) button will switch between the last two channels selected on the numeric keypad.

**Note:** When rapidly scanning channels with the CHANNEL UP/DOWN button, pressing the R-TUNE button will switch between the last channel scanned, and initial channel at the start of scanning.

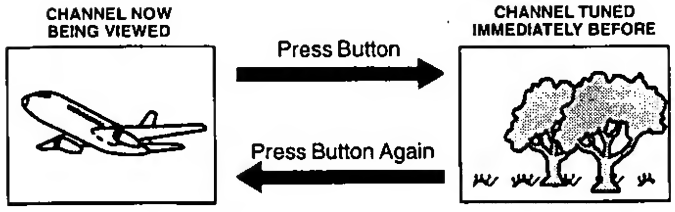


### *Helpful Hints:*

Press the TV Mode Selection button to operate TV Remote functions, if necessary (some models).




## Multi Button (For CT–27G22/U and CT–27S21)

**The MULTI button can be programmed to operate up to six (6) Remote function buttons at the same time.**

**For Example:** TV Power/On, VCR Power/On, and Cable box Power/On (selected brands) can be operated at the same time with one press of the MULTI button. **(The VCR Mode button should be programmed before starting procedure).**

**Procedure**

1. Program the Remote for the selected device Infrared access code. Confirm that the Remote Control is compatible with the device.
2. Face the Remote Control transmitter away from all equipment remote sensors.
3. Press and hold the Remote POWER button, then press and hold the ACTION button down at the same time for three seconds. (All previous commands are erased.)




4. After three seconds, release the POWER and ACTION buttons.
5. Press the MULTI button. (Waiting more than 30 seconds without pressing another button will exit the programming mode.)
6. Press a maximum of six (6) function buttons on the Remote Control.

   Each button you press is equal to one function. If six (6) Remote button functions are entered, all will register in the MULTI button memory in the sequence entered. When finished, press the MULTI button to exit the programming mode.

**The following is an example flow chart of Remote functions that can be programmed into the MULTI button.**

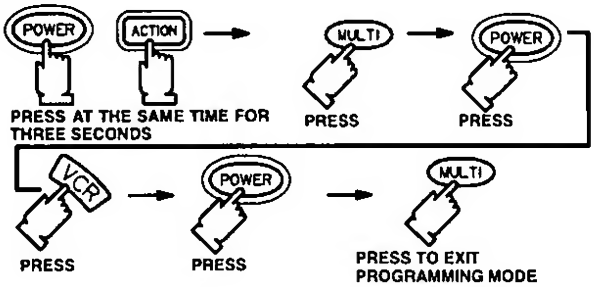


You can now turn the TV and VCR ON/OFF at the same time with one press of the MULTI button.

**To delete entered functions** – Press and hold the Remote POWER button, then press and hold the ACTION button down at the same time for three seconds. You can now enter from one to six different Remote functions.

**Note:** You can also program the MULTI button to perform most individual Remote Control button functions. Buttons which continuously perform a function as long as pressed (Volume Up/Down, Channel Up/Down, etc.) cannot be programmed; only those buttons which perform a function when initially pressed (Power On/Off, Mute, Direct Channel Entry, etc.) can be programmed.

## Special Functions (cont.)

## Multi Button (For CT–2768S)

**The MULTI button can be programmed to operate up to 6 Remote function buttons at the same time.**

**For Example:** TV Power/On, VCR Power/On (selected brands) can be operated at the same time with one press of the MULTI button.

**Procedure**

1. First program the Remote for the selected VCR Infrared access code. Confirm that the Remote Control is compatible with the equipment.
2. Face the Remote Control transmitter away from all equipment remote sensors.
3. Press and hold down the Remote TV Power button, then press and hold down the MULTI button at the same time. Release buttons (All previous commands will be erased.)

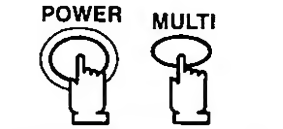


PRESS SIMULTANEOUSLY

4. Press a maximum of 6 Function buttons on the Remote.

   Each button you press is equal to one function. If six Remote button functions are entered, all will register in the MULTI button memory in the sequence entered. When less than six Remote button functions are entered, press the MULTI button to end the program mode. (Waiting more than 30 seconds without pressing another button will also end the program mode.)

**The following is an example of Remote functions that can be programmed into the MULTI button.**

- TV Power – For turning TV ON and OFF.
- VCR Power – For turning VCR ON and OFF (selected brands after programming it's Infrared access code, if necessary).

  Both can be turned ON or OFF with one press of the MULTI button.

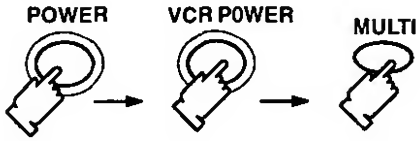


**To delete entered functions –** Repeat step 3. Now you can enter from one to six different Remote functions.

**NOTE:** You can also program the MULTI button to perform most individual Remote Control button functions. Buttons which continuously perform a function as long as pressed (Volume Up/Down, Channel Up/Down, etc.) cannot be programmed. Only those buttons which perform a function when initially pressed (Power On/Off, Mute, Direct Channel Entry, etc.) can be programmed.

## Cable Power Button (For CT–2768S)

CABLE POWER

The [ ] on the Remote Control has been designed to operate selected brands of Cable Television Converter boxes. The proper cable television converter box infrared code must be obtained prior to use. (Please refer to Programming the Universal Remote for programming instructions.) The Remote Control TV/VCR/CABLE switch should be in the CABLE position.

**NOTE:** The CH ∧ or CH ∨ on the Remote may be used for selecting Cable Converter box channels.

## PIP (Picture in Picture) Button

This feature allows the viewer to monitor one channel program while watching another. The monitored source (PIP) must be a different video source (such as a VCR) when connected to the input jacks.

- S-Video connection will also operate the PIP feature (refer to OPTIONAL S-VIDEO VHS CONNECTION section).
- When the Main Picture is in Video mode with no signal, the PIP will not operate properly.

**PIP Operation**

1. Turn VCR ON and select a desired channel.
2. Press the TV Mode Selection button to operate TV Remote functions, if necessary (some models).
3. Press the PIP button (set must be ON). The PIP frame will appear at the position it was last displayed. The Main Picture Video Source and PIP Video Source will display on screen momentarily. Audio will be that of Main Picture.

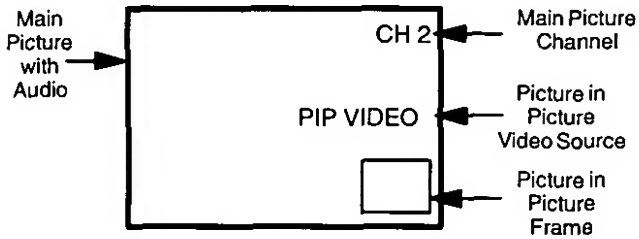


4. Press the PIP button again to cancel PICTURE IN PICTURE feature (if desired).

**Note:** For PIP Video source connection, refer to the PIP External Video and Antenna Connections section.

## Special Functions (cont.)

### Swap Button

Press the SWAP button (when the PIP frame is displayed) to interchange what is being viewed on the Main Picture with that of the PIP frame.

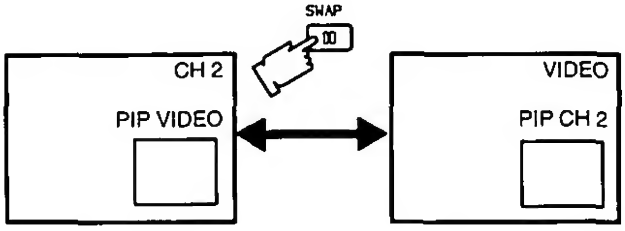


**Note:** Audio will be that of Main Picture.

### Size Button

Press the SIZE button (when the PIP frame is displayed) to choose either the large or small PIP frame.

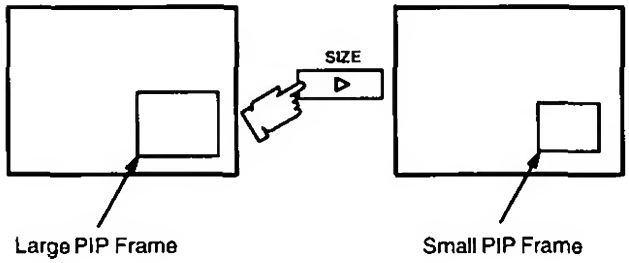


### Freeze Button

Press the FREEZE button to stop action in the PIP frame.

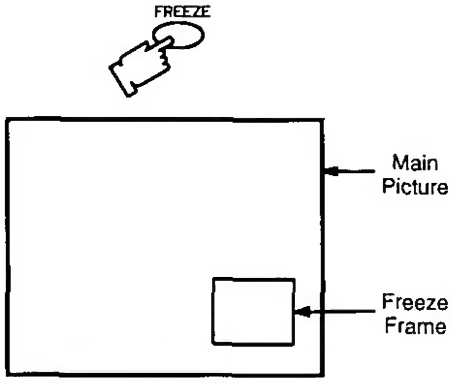


**Notes:**

- Pressing the FREEZE button when the PIP frame is not displayed, will stop action in the Main Picture and display it within the PIP frame.
- Pressing the FREEZE button when PIP frame is displayed, will stop action in the PIP frame. Press the FREEZE button again to continue action.
- Press the PIP button to delete PIP frame.

### Move Button

The PIP frame may be located at any corner of the Main Picture by pressing the PIP MOVE button (when the PIP frame is displayed).




**Note:** Each time MOVE button is pressed (when the PIP frame is displayed), the PIP frame will move counterclockwise as illustrated.

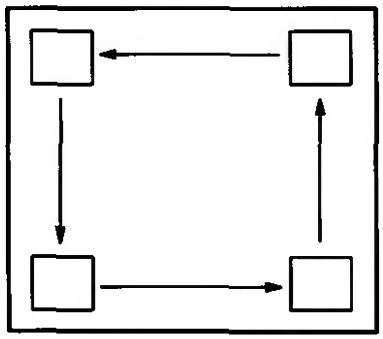

# Main Menu Icons

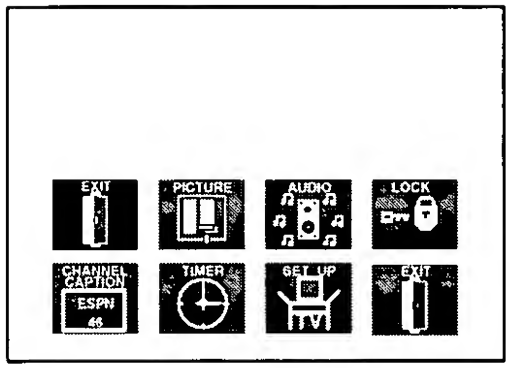


**Note:** When Auto Power On feature is activated, Timer Icon will change to Exit Icon.

Display and Exit Menus

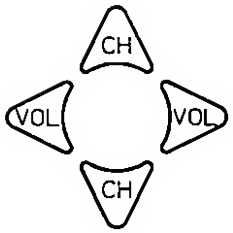


**CH BUTTONS**
Highlight Desired Feature when Menu is Displayed

**VOL BUTTONS**
Selects or Adjusts Features when Menu is Displayed

Located On Remote Control

1. Press ACTION.
2. Press CH or CH and VOL or VOL to select the desired Icon.
3. Press ACTION after selecting the desired Icon to access sub menus.
4. Press ACTION twice to exit sub menus or press ACTION once while the EXIT Icon is highlighted to exit Main Menu.

## Menu Language Selection

**The MENU LANGUAGE is factory set to ENGLISH. Follow the instructions to change the Language Menu to SPANISH, FRENCH, and back to ENGLISH.**

1. Press ACTION.
2. Press CH or CH and VOL or VOL to highlight the Set-Up Icon.
3. Press ACTION to display the Set-Up Menu.

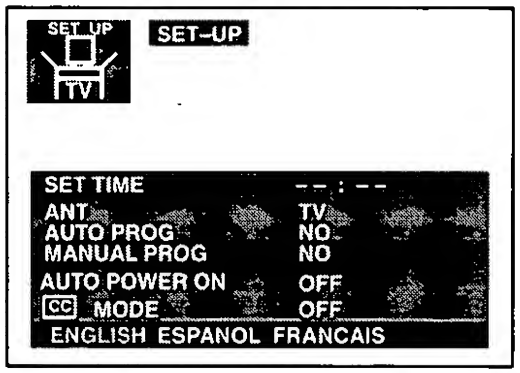


4. Press CH or CH to highlight ENGLISH, ESPAÑOL, FRANÇAIS.
5. Press VOL or VOL to select ENGLISH, ESPAÑOL, or FRANÇAIS.
6. Press ACTION twice to exit menus.

# Picture Adjustments

## Picture Norm

Use to reset Color, Tint, Brightness, Picture, and Sharpness adjustments back to a factory preset level.

1. Press ACTION.
2. Press CH ∧ or CH ∨ and VOL ◁ or VOL ▷ to highlight the Picture Icon.
3. Press ACTION to display the Picture Adjustment Menu.

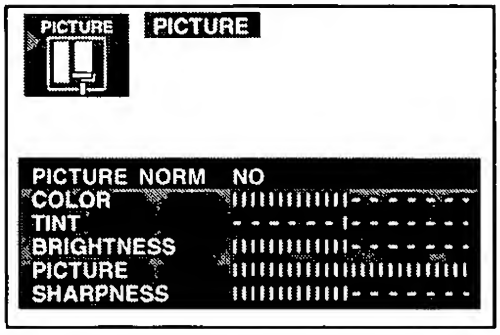


4. Press CH ∧ or CH ∨ to highlight PICTURE NORM.
5. Press VOL ◁ or VOL ▷ to select "SET" to normalize Color, Tint, Brightness, Picture, and Sharpness.
6. Press ACTION twice to exit menus.

## Color, Tint, Brightness, Picture, and Sharpness Adjustments

1. Press ACTION.
2. Press CH ∧ or CH ∨ and VOL ◁ or VOL ▷ to highlight the Picture Icon.
3. Press ACTION to display the Picture Adjustment Menu.

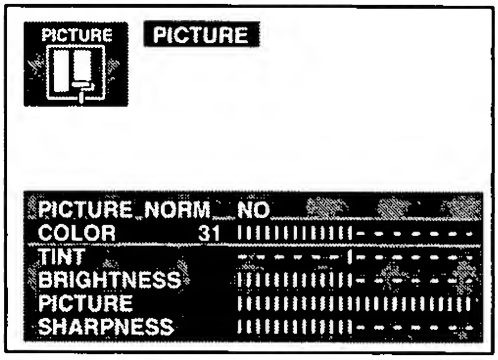


4. Press CH ∧ or CH ∨ to select the desired Picture Adjustment (Color, Tint, Brightness, Picture, or Sharpness).
5. Press VOL ◁ or VOL ▷ to adjust your selection. (The Selected Picture Adjustment will be displayed.)
6. Repeat steps 4 and 5 for the remaining Picture Adjustments.
7. Press ACTION twice to exit menus.

### *Helpful Hints:*

**COLOR** – Adjust for desired color intensity.

**TINT** – Adjust for natural flesh tones.

**BRIGHTNESS** – Adjust so dark areas of picture slightly become black for a crisp detail.

**PICTURE** – Adjust the white areas of the picture as desired.

**SHARPNESS** – Adjust for best clarity of outline detail.

# Audio Adjustments

## Mode

When Audio is broadcast in Stereo or SAP, an On-Screen display will appear on initial "Turn On" and "Channel Change". The available choices will be highlighted.

1. Press ACTION.
2. Press CH▲ or CH▼ and VOL◄ or VOL► to highlight the Audio Icon.
3. Press ACTION to display the Audio Adjustment Menu.

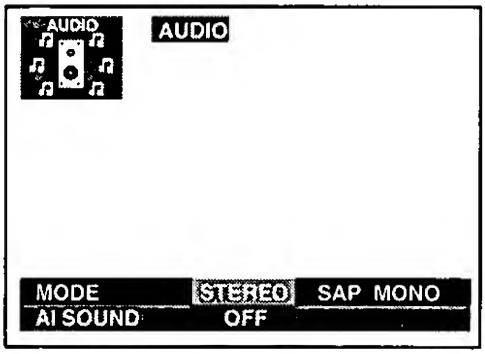


4. Press VOL◄ or VOL► to select STEREO, SAP (Second Audio Programming), or MONO. The selected mode will be highlighted.
5. Press ACTION twice to exit menus.

## AI Sound

This feature regulates the volume between programs and commercial audio to maintain a constant sound output level.

1. Press ACTION.
2. Press CH▲ or CH▼ and VOL◄ or VOL► to highlight the Audio Icon.
3. Press ACTION to display the Audio Adjustment Menu.

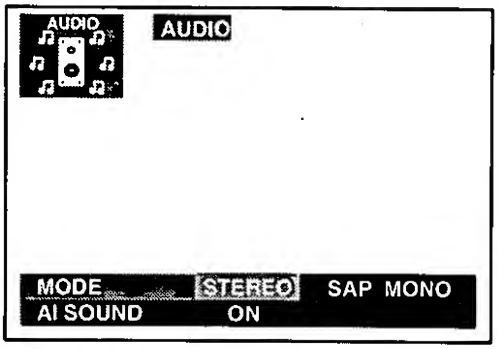


4. Press CH▲ or CH▼ to highlight AI SOUND.
5. Press VOL◄ or VOL► to select ON or OFF.
6. Press ACTION twice to exit menus.

# Lock

## Lock Game Guard

Prevents video games and other video sources from being viewed. Channel 3, 4 and video inputs are locked out for 12, 24 or 48 hours. **NOTE:** Be sure to understand this feature before attempting its use. **Use a code that you will easily remember or write down code on a piece of paper.**

1. Press ACTION.
2. Press CH or CH and VOL or VOL to highlight the Lock Icon.
3. Press ACTION to display the Lock Menu.

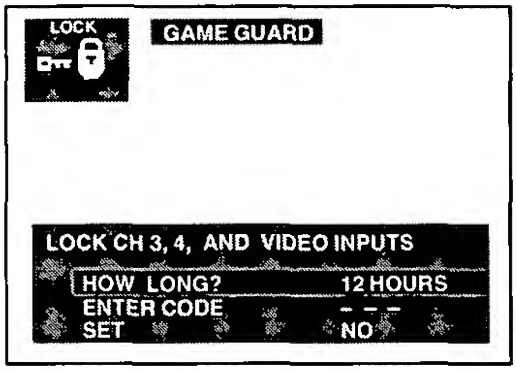


4. "HOW LONG" should already be highlighted. Press VOL to select the desired amount of time (12, 24 or 48 hours) for Game Guard Lockout to be activated.
5. Press CH to highlight ENTER CODE. Then enter a 3 digit code with the Remote Control Keypad. "SET" should be highlighted after entering the last digit. **IMPORTANT NOTE: Use a code you can easily remember or write down the code on a piece of paper.**
6. Press VOL after entering three digit code. "Game Guard Locked" will display On Screen.

Game Guard Activated

## Unlock Game Guard

To unlock the Game Guard feature, repeat steps 1 through 3 from Lock Game Guard procedure. Enter the same 3 digit code previously used in step 5 with Remote Control Keypad.

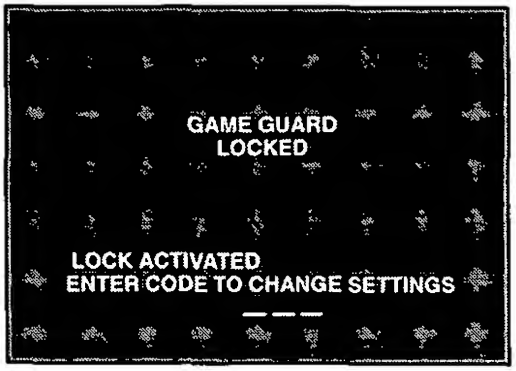


Enter Same 3 Digit Code Previously Used

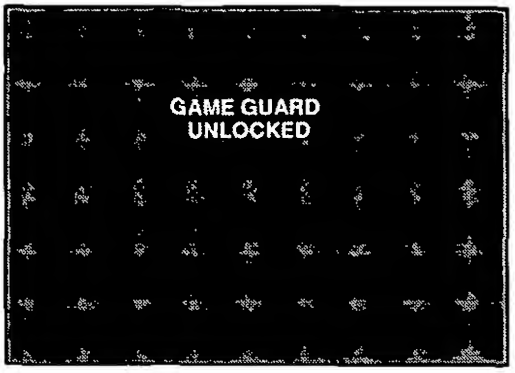


If 3 Digit Code Is The Same

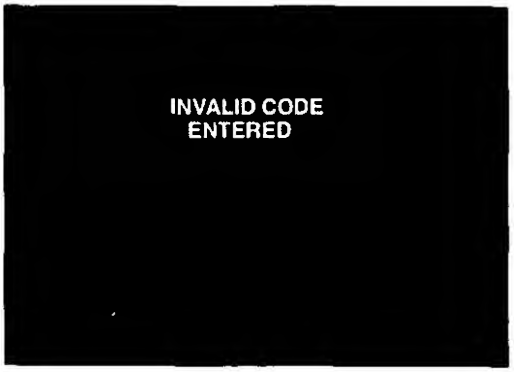


If 3 Digit Code Is Not The Same

# Channel Caption

This feature allows you to enter the call names of up to 30 stations into memory (using up to 4 characters for each station). The call name will then display along with the channel number when changing channels or pressing RECALL.

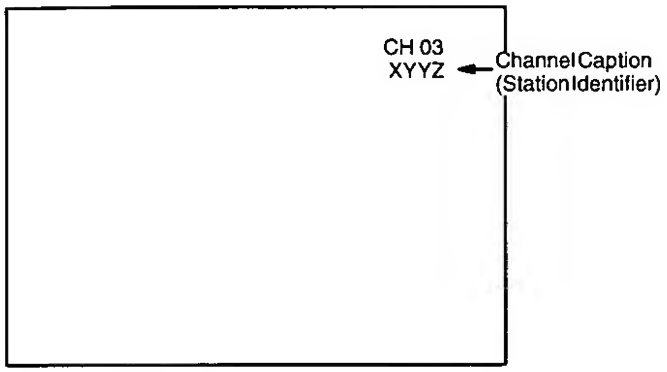


1. Press ACTION.
2. Press CH ▲ or CH ▼ and VOL ◀ or VOL ▶ to highlight the Channel Caption Icon.
3. Press ACTION to display the Channel Caption Menu.

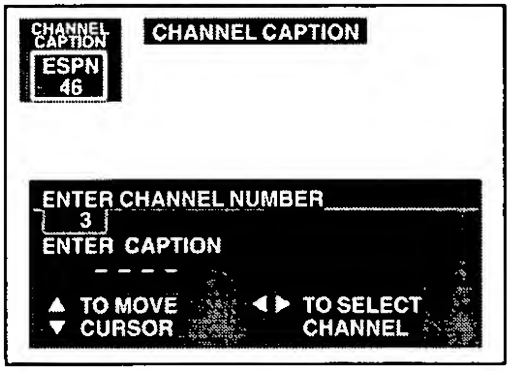


4. Press VOL ◀ or VOL ▶, or use the Remote Control Keypad to enter the channel number you wish to assign a Station Identifier.
5. Press CH ▼ to highlight ENTER CAPTION.
6. Press VOL ◀ or VOL ▶ to select first character in Station Identifier. Then press CH ▼ to move cursor to the second position and repeat until the complete Station Identifier is entered (up to 4 characters).
7. Press CH ▲ or CH ▼ to highlight ENTER CHANNEL NUMBER. Then repeat steps 4 through 6 to continue adding Channel Station Identifier(s).
8. Press ACTION twice to exit menus.

**NOTE: To delete** a Channel Caption (Station Identifier) from memory all four character positions in the "ENTER CAPTION" area must display a dash mark (–).

***Helpful Hints:***

When the Maximum amount of station identifiers are entered, "FULL" will be displayed in the caption position.

# Timer Features

## Sleep Timer

This feature is used for automatic turn off in 30, 60 or 90 minutes. Display will flash 3, 2 and 1 to indicate the last three remaining minutes prior to turn off. The Recall display will also appear.

**NOTE: This feature will be disabled when Auto Power On is activated.**

1. Press ACTION.
2. Press CH ▲ or CH ▼ and VOL ◀ or VOL ▶ to highlight the Timer Icon.
3. Press ACTION to display the Timer Control Menu.

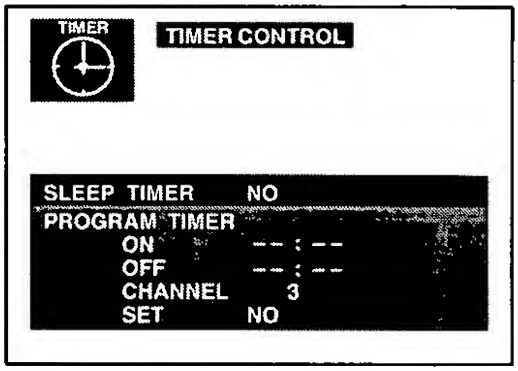


4. Press VOL ▶ to select NO, 30, 60 or 90 minutes (Sleep Timer will be activated).
5. Press ACTION twice to exit menus.

**NOTE: To deactivate** Sleep Timer repeat steps 1 through 4. In step 4 select "NO" instead of minutes.

***Helpful Hints:***

Press the RECALL button to display the remaining minutes for Sleep Timer, the status will display in the bottom left corner.

## Timer Features (cont.)

**Special Feature:**

**Automatic turn "OFF" after 90 minutes.**

The TV has a special feature that will shut itself **OFF** after 90 minutes when turned **ON** by the program timer unless a function key is pressed during the 90 minutes.
This feature is useful so that the TV will not remain **ON** unattended for an extended period of time.
Programming the **OFF** timer will cancel the automatic **OFF** Special Feature.

## Program Timer

This feature is capable of turning the TV on, tuned to a desired channel and off at a predetermined time (one day or daily). The clock must be set for this feature to operate. (Refer to the Set–Up Menu to set time.)

**NOTE: This feature will be disabled when Auto Power On is activated.**

1. Press ACTION.
2. Press CH ∧ or CH ∨ and VOL ◁ or VOL ▷ to highlight the Timer Icon.
3. Press ACTION to display the Timer Control Menu.

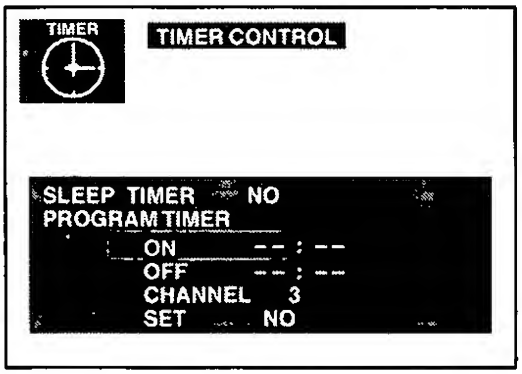


4. Press CH ∨ to highlight ON (time).
5. Press VOL ◁ or VOL ▷ repeatedly to set hours (set AM/PM accordingly).
6. Press CH ∨ to highlight the minutes position.
7. Press VOL ◁ or VOL ▷ repeatedly to set minutes.
8. Press CH ∨ to highlight OFF (time).

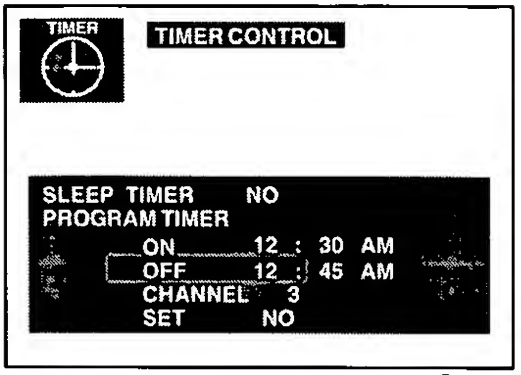


9. Repeat steps 5 through 7 for setting OFF (time).
10. Press CH ∨ to highlight CHANNEL.

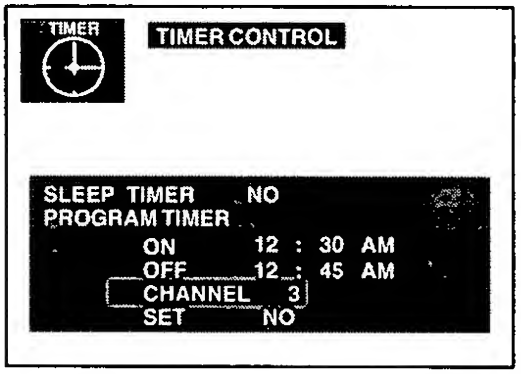


11. Press VOL ◁ or VOL ▷ or use the Remote Control Keypad to enter the channel number desired when the set turns "ON".
12. Press CH ∨ to highlight SET.

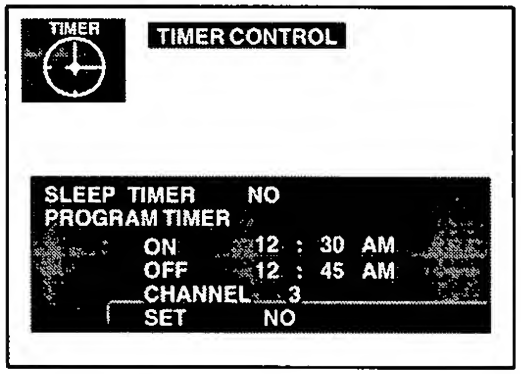


13. Press VOL ▷ to select:
    - NO – not activated
    - ONE DAY – activated
    - DAILY – activated
14. Press ACTION twice to exit menus.

**NOTE: To deactivate** Program Timer select NO in step 13.

***Helpful Hints:***

- If the Program Timer "ON" functions while the set is operating, the set will automatically tune to the channel designated in the Timer Program.

# Set-Up Features

## Set Time

Clock (when set) will display on screen at initial "Turn On", after a channel change and when pressing the RECALL button. The time must be set first in order to operate the Program ON/OFF Timer.

**NOTE: This feature will be disabled when Auto Power On is activated.**

1. Press ACTION.
2. Press CH▲ or CH▼ and VOL◄ or VOL► to highlight the Set–Up Icon.
3. Press ACTION to display the Set–Up Menu.

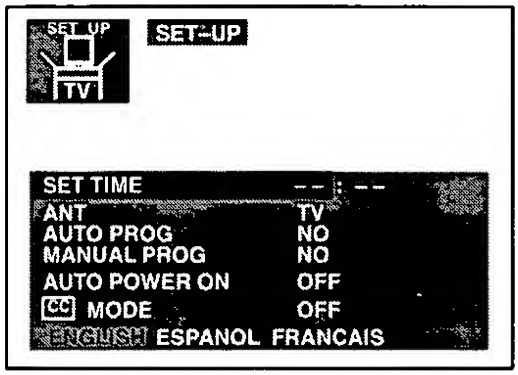


4. Press VOL◄ or VOL► to set hours (set AM/PM accordingly).
5. Press CH▼ to select minutes position.
6. Press VOL◄ or VOL► repeatedly to set minutes.
7. Press ACTION twice to exit menus.

## Antenna (Ant)

The proper Input mode must be selected for the type of signal at the antenna input.

- TV mode is used when the Receiver is not connected to a cable TV system, for example when using a VHF/UHF antenna (channels 02 – 69).
- Cable mode is used when the Receiver is connected to a Cable TV system and you are not using a cable company converter box (channels 01 – 125).

**NOTE: This feature is disabled when Game Guard Lock is activated.**

1. Press ACTION.
2. Press CH▲ or CH▼ and VOL◄ or VOL► to highlight the Set–Up Icon.
3. Press ACTION to display the Set–Up Menu.

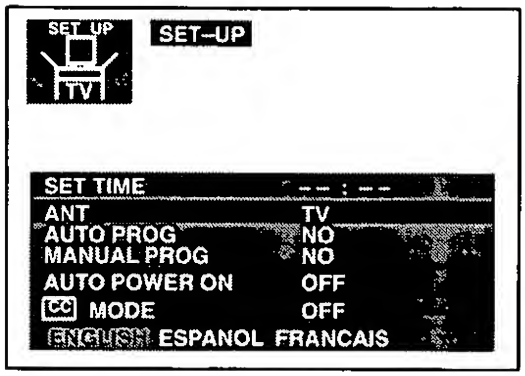


4. Press CH▼ to highlight ANT.
5. Press VOL◄ or VOL► to select TV or CABLE.
6. Press ACTION twice to exit menus.

## Auto Prog

This feature allows you to place all channels with a video signal into Channel Scan Memory.

**NOTE: This feature is disabled when Game Guard Lock is activated.**

1. Press ACTION.
2. Press CH▲ or CH▼ and VOL◄ or VOL► to highlight the Set–Up Icon.
3. Press ACTION to display the Set–Up Menu.

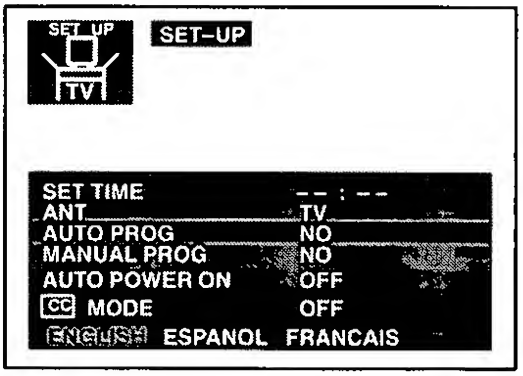


4. Press CH▼ to highlight AUTO PROG.
5. Press VOL◄ or VOL► to start Auto Programming. Channels will automatically advance until all channels have been scanned.
6. Press ACTION twice after completion of Auto Programming to exit menus.

**NOTE:** Channel numbers with signal present will turn blue which indicates stored in Channel Scan Memory.

# Set-Up Features (cont.)

## Manual Prog

This feature allows you to select which channels are placed into Channel Scan Memory.

1. Press ACTION.
2. Press CH or CH and VOL or VOL to highlight the Set–Up Icon.
3. Press ACTION to display the Set–Up Menu.

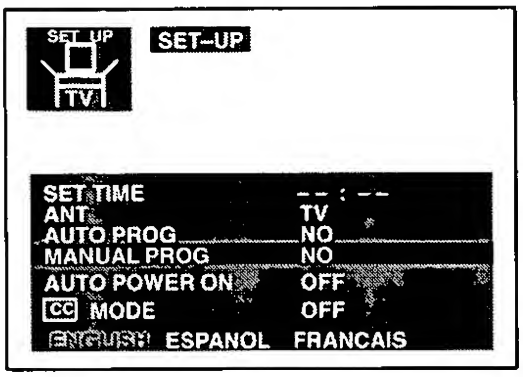


4. Press CH to highlight MANUAL PROG.
5. Press VOL or VOL to display the Manual Programming Menu.

**NOTE: This feature is disabled when Game Guard Lock is activated.**

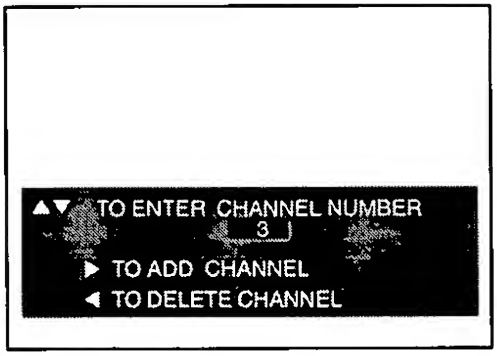


6. Use the CH or CH or the Remote Keypad "0 through 9" buttons to select channels.
7. Press VOL to **add** channel(s) to memory (Blue). Press VOL to **delete** channels from memory (Yellow).
8. Repeat steps 6 and 7 to continue adding or deleting channels.
9. Press ACTION twice to exit menus.

## Auto Power On

This feature allows the user to power up the TV at the same time as the cable box (or other components). Of course, the TV must be plugged into the cable box.

**NOTE: When this feature is activated (on), Timer features will be disabled.**

1. Press ACTION.
2. Press CH or CH and VOL or VOL to highlight the Set–Up Icon.
3. Press ACTION to display the Set–Up Menu.

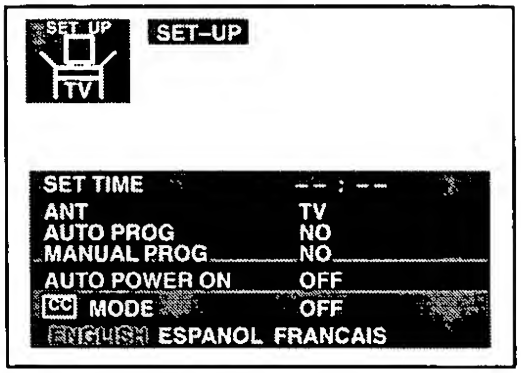


4. Press CH to highlight AUTO POWER ON.
5. Press VOL or VOL to select SET or OFF.
6. Press ACTION twice to exit menus.

## CC (Closed Caption) Mode

This Receiver has a built in decoder that provides a visual depiction of the audio portion of a television program, in the form of written words across the screen (White or Colored letters on a black background). It allows the viewer to read the dialogue of a television program or other information.

**When the Closed Caption is in the OFF Mode:**
**The viewer may display closed caption by pressing MUTE ○ on the remote control. Press again to delete.**

1. Press ACTION.
2. Press CH or CH and VOL or VOL to highlight the Set–Up Icon.
3. Press ACTION to display the Set–Up Menu.

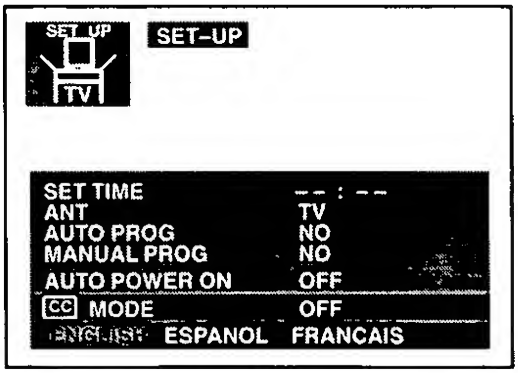


4. Press CH to highlight CC MODE.
5. Press VOL to select OFF, C1, or C2.
6. Press ACTION twice to exit menus.

# Programming The Universal Remote Control (For CT-2768S)

## VCR

### *Preferred Procedure – Code Known*

### Programming Universal Remote Using Infra-Red Access Codes for VCRs

- Determine brand of VCR.
- Identify code(s) associated with the brand in the infra-red code index for VCRs (located in this manual).

**Procedure**

1. Place the Remote TV/VCR/CABLE into the VCR position.
2. Press and hold VCR POWER down on Universal Remote.
3. Enter two digit code using keypad "0 through 9" buttons. VCR POWER Release . The Universal Remote is now programmed.

**NOTE:** Some brands have multiple codes. Repeat procedure using each code listed until VCR responds correctly.

### *Alternate Procedure – Code Unknown*

### Programming Universal Remote Using the "Sequence Method" for VCRs

- Confirm VCR is plugged in and operating properly, then turn OFF.

**Procedure**

1. Place the Remote TV/VCR/CABLE into the VCR position.
2. Press and hold the VCR POWER down on Universal Remote.
3. Press repeatedly. Check for the VCR to turn ON after each press. When the VCR turns ON, release VCR Power button. The proper infra-red code has now been accessed.

**NOTE:**

1. It may take several attempts before the correct code is found.
2. The can be used to return to a code that was accidently passed by.
3. Some Remote Controls may have unique operating functions for some buttons. For Example: The POWER button may only turn the VCR OFF as opposed to both ON and OFF. It will then be necessary to modify the procedure. Turn the VCR ON and repeatedly press the until the VCR turns OFF.

## Cable Converter Box

### *Preferred Procedure – Code Known*

### Programming Universal Remote Using Infrared Access Codes for Cable Television Converter Boxes

- Determine brand of Cable Television Converter box.
- Identify code(s) associated with the brand in the infra-red code index for Cable Television Converter boxes (located in this manual).

**Procedure**

1. Place the Remote TV/VCR/CABLE into the CABLE position.
2. Press and hold the CABLE POWER down on Universal Remote.
3. Enter two digit code using keypad "0 through 9" buttons. CABLE POWER Release The Universal Remote is now programmed. **Use the Remote and for selecting Cable Converter Box channels.**

**NOTE:** Some brands have multiple codes. Repeat procedure using each code listed until Cable Television Converter box responds correctly.

### *Alternate Procedure – Code Unknown*

### Programming Universal Remote Using the "Sequence Method" for Cable Television Converter Boxes

- Confirm Cable Television Converter box is plugged in and operating properly, then turn OFF.

**Procedure**

1. Place the Remote TV/VCR/CABLE into the CABLE position.
2. Press and hold CABLE POWER down on Universal Remote.
3. Press repeatedly. Check for the Cable Television Converter box to turn ON after each press. When the Cable Television Converter box turns ON, release Cable Power button. The proper infrared code has now been accessed.

**NOTE:**

- It may take several attempts before the correct code is found.
- The can be used to return to a code that was accidently passed by.
- Some Remote Controls may have unique operating functions for some buttons. For Example: The POWER button may only turn the Cable Television Converter box OFF as opposed to both ON and OFF. It will then be necessary to modify the procedure. Turn the Cable Television Converter box ON and repeatedly press the until the Cable Television Converter box turns OFF.

**NOTE:** When operating equipment (VCR or Cable Converter box) with the Universal Remote Control, the TV/CABLE Switch should be set to the same position where the Access Code was first programmed for the equipment. Otherwise, leave the switch in the TV position.

# VCR and Cable Converter Box Infrared Codes Index
## (For CT–2768S)

The Universal infrared Remote Control is capable of operating many brands of VCRs and Cable Television Converter Boxes after entering the proper infrared code.

**NOTE:** The Universal Remote Control memory is limited. Some models of VCRs or Cable Television Converter Boxes may not operate. The Universal Remote Control is not designed to control all features that are available in all models.

### Infrared Code Index For VCRs

| VCR Brand | Code(s) | VCR Brand | Code(s) |
|---|---|---|---|
| Audio Dynamics | 14, 16 | NEC | 02, 14, 16, 30 |
| Broksonic | 10 | Panasonic | 00, 01 |
| Canon | 00, 01 | Pentax | 05 |
| Capehart | 01 | Philco | 00, 29 |
| Citizen | 09 | Philips | 00, 29 |
| Craig | 12 | Pioneer | 05 |
| Curtis Mathes | 00, 08, 15 | Quasar | 00, 01 |
| DBX | 14, 16 | RCA | 05, 07, 08, 28, 35 |
| Emerson | 10, 20, 34, 35, 36, 37 | Realistic | 00, 02, 06, 12, 15 |
| Fisher | 12, 18, 19 | Samsung | 07, 32 |
| Funai | 15 | Sanyo | 02, 12 |
| GE | 00, 07, 08, 32 | Scott | 04, 13, 33, 36 |
| Goldstar | 09 | Sears | 02, 05, 18, 19 |
| Hitachi | 05, 35, 36 | Sharp | 06, 24 |
| Instant Replay | 00 | Sony | 17, 26, 33, 34 |
| JC Penney | 00, 02, 05, 14, 16, 30 | Sylvania | 00, 29 |
| JVC | 02, 14, 16, 30 | Symphonic | 15 |
| Kenwood | 02, 14, 16, 30 | Tashiko | 09 |
| Magnavox | 00, 29 | Tatung | 30 |
| Marantz | 02, 14, 16, 29, 30 | Teac | 15, 30 |
| Marta | 09 | Teknika | 21 |
| Memorex | 00, 12 | Toshiba | 05, 13 |
| MGA | 04, 27 | Vector Research | 14, 16 |
| Minolta | 05 | Video Concepts | 14, 16 |
| Mitsubishi | 04, 27 | Wards | 06 |
| Montgomery Ward | 06 | Yamaha | 02, 14, 16, 30 |
| Multitech | 07, 15, 32 | Zenith | 11, 17 |

### Infrared Code Index For Cable Television Converter Box

| Brand of Cable–TV Box | Code(s) | Brand of Cable–TV Box | Code(s) |
|---|---|---|---|
| G.I. | 04, 05, 15, 23, 24, 25, 30, 36 | Pioneer | 18, 20 |
| | | RCA | 27 |
| Hamlin | 12, 13, 34 | Regency | 02 |
| Jerrold | 04, 05, 15, 23, 24, 25, 30, 36 | Scientific Atlantic | 03, 22 |
| | | Sylvania | 11 |
| Macom | 27 | Texscan | 10, 11 |
| Magnavox | 19, 26, 28, 29, 32, 33, 40, 41 | Tocom | 17, 21 |
| | | Unika | 31 |
| Oak | 14,16, 18 | Viewstar | 19, 26, 28, 29, 32, 33, 40, 41 |
| Oak Sigma | 16 | | |
| Panasonic | 27, 39 | Zenith | 01, 42 |
| Philips | 19, 26, 28, 29, 32, 33, 40, 41 | | |

# Programming the Home Theater Remote (For CT-27S21)

The remote control can be set to control other manufacturers components, by utilizing the **MODE SELECTION BUTTONS** for **CABLE**, **DSS**, **VCR**, **RCVR** (a **Receiver** or **Amplifier**), **CD**, **LD**, and **AUX** (for **Cassette Players, Second VCR** or a **DVD**.)

## Code Known

**Use the following procedure for setting up the remote control using the numerical buttons when the component's remote code is known.**

1. Determine the brand of the component.
2. Identify the code(s),associated with the brand from the infrared code index (see following pages). Record all possible codes.
3. Confirm that the component is plugged in and operating properly, then turn it OFF.
4. **Press and hold the ACTION button, then the POWER button so that both are pressed at the same time for at least 5 seconds. All Mode buttons will flash.** Then let go of the buttons.
5. **Press the appropriate Mode button for the component. The pressed button will illuminate steadily. All other buttons will go out.**
6. **Enter the 3-digit code, by using the Remote Control Keypad "0" through "9" buttons. If a proper code was entered, the Mode button will blink twice then go out.**

   **Now the remote is set for the entered code.**
7. **Press the POWER button to test the remote. If the correct code is setup for the component (in step 6), the component will turn on.**

***NOTE:*** Some brands have multiple codes. Repeat the procedure using another listed code until the component responds correctly.

## Code Unknown

**Use the following procedure for setting up the remote control when the component's remote access code is not known. This procedure uses the "sequence method".**

1. Confirm that the component is plugged in and operating properly, then turn it OFF.
2. **Press and hold the ACTION button, then the POWER button so that both are pressed at the same time for at least 5 seconds. All Mode buttons will flash.** Then let go of the buttons.
3. **Press the appropriate Mode button for the device. The pressed button will illuminate steadily. All other buttons will go out.**
4. **Press the VOL button to step over to the next code.**
5. **Press the POWER button to test the remote. If the correct code is sent, the component will turn on.**
6. **Once the correct code is found, press the ACTION button to store the code.**
7. Repeat from step 3 above until the proper component code is found. It may take several attempts before the correct code is found.

***NOTE:*** If an incorrect code is entered, or when the operation is not completed within 30 seconds, the settings will not change.

6
**Code From Index Sheet**

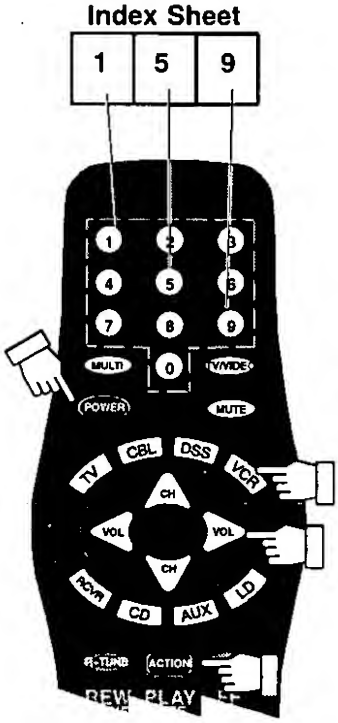


EUR511060

## Infrared Remote Codes for Specific Components

***Helpful Hint:*** **Write down the code numbers for your components in the space provided below. This will serve as a handy reference whenever you need to reprogram your remote control.**

| | | |
|---|---|---|
| **CABLE** Cable TV Converter Box | **VCR** Video Cassette Recorder | **CD** Compact Disc Player |
| **DSS** Digital Satellite System | **RCVR** Receiver or Amplifier | **LD** Laser Disc Player |
| Other Component | Other Component | Other Component |
| Other Component | Other Component | Other Component |

# Programming the Home Theater Remote (For CT–27G22/U)

The remote control can be set to control other manufacturers components, by utilizing the **MODE SELECTION BUTTONS** for **CABLE**, **DSS**, **VCR**, **RCVR** (a **Receiver** or **Amplifier**), **CD**, **LD**, and **AUX** (for **Cassette Players, Second VCR** or a **DVD**.)

## Code Known

**Use the following procedure for setting up the remote control using the numerical buttons when the component's remote code is known.**

1. Determine the brand of the component.
2. Identify the code(s) associated with the brand from the infrared code index (see following pages). Record all possible codes.
3. Confirm that the component is plugged in and operating properly, then turn it OFF.
4. **Press and hold the ACTION button, then the POWER button so that both are pressed at the same time for at least 5 seconds.** Then let go of the buttons.
5. **Press the appropriate Mode button for the component.**
6. **Enter the 3-digit code, by using the Remote Control Keypad "0" through "9" buttons.**

   **Now the remote is set for the entered code.**
7. **Press the POWER button to test the remote. If the correct code is setup for the component (in step 6), the component will turn on.**

***NOTE:*** Some brands have multiple codes. Repeat the procedure using another listed code until the component responds correctly.

6
**Code From Index Sheet**

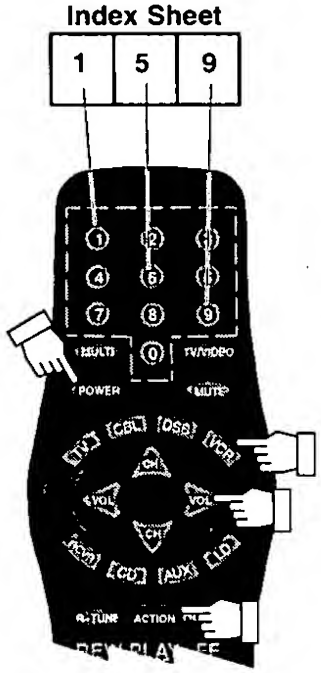


**EUR511051**

## Code Unknown

**Use the following procedure for setting up the remote control when the component's remote access code is not known. This procedure uses the "sequence method".**

1. Confirm that the component is plugged in and operating properly, then turn it OFF.
2. **Press and hold the ACTION button, then the POWER button so that both are pressed at the same time for at least 5 seconds.** Then let go of the buttons.
3. **Press the appropriate Mode button for the device.**
4. **Press the VOL button to step over to the next code.**
5. **Press the POWER button to test the remote. If the correct code is sent, the component will turn on.**
6. **Once the correct code is found, press the ACTION button to store the code.**
7. Repeat from step 3 above until the proper component code is found. It may take several attempts before the correct code is found.

***NOTE:*** If an incorrect code is entered, or when the operation is not completed within 30 seconds, the settings will not change.

## Infrared Remote Codes for Specific Components

***Helpful Hint:*** **Write down the code numbers for your components in the space provided below. This will serve as a handy reference whenever you need to reprogram your remote control.**

| | | |
|---|---|---|
| **CABLE** Cable TV Converter Box | **VCR** Video Cassette Recorder | **CD** Compact Disc Player |
| **DSS** Digital Satellite System | **RCVR** Receiver or Amplifier | **LD** Laser Disc Player |
| Other Component | Other Component | Other Component |
| Other Component | Other Component | Other Component |

# VCR Infrared Codes Index (For CT–27G22/U and CT–27S21)

The Universal Infrared Remote Control is capable of operating many brands of VCRs. Refer to the Programming the Remote Control section for procedures.

**Note:** The Universal Remote Control memory is limited; therefore, some models of VCRs may not operate. The Universal Remote Control is not designed to control all features that are available in all models.

**Note:** After entering the proper infrared code, press the Remote **VCR** (*) Selection Mode button. **A second VCR can be activated** using the same codes, from **AUX** (**) Selection Mode button. Then refer to the Remote Control Key Functions section, for Remote VCR and VCR 2 function key listing.

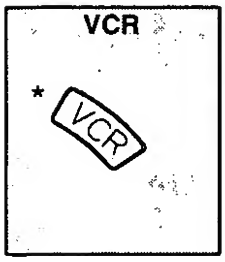


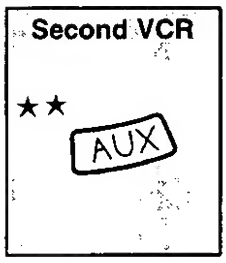


## Code Index for VCRs

| VCR Brand | Code(s) | VCR Brand | Code(s) |
|---|---|---|---|
| Admiral | 200 | Pentax | 000, 011, 300 |
| Aiwa | 137, 160 | Philco | 081, 125, 130, 136, 137, 150 |
| Akai | 014, 015, 016, 142 | | |
| Audio Dynamic | 011, 240 | Philips | 125, 130, 150 |
| Bell & Howell | 005, 013 | Pioneer | 125 |
| Broksonic | 081, 136 | Proscan | 000, 001, 002, 125, 130, 150, 300, 310 |
| Canon | 125, 135 | | |
| Citizen | 006 | Quasar | 100, 101, 125, 130 |
| Craig | 005, 006, 141 | Radio Shack | 005, 009, 130, 137, 170, 210, 241 |
| Curtis Mathes | 130, 137, 300 | | |
| Daewoo | 001, 130, 250 | RCA | 000, 001, 002, 125, 130, 150, 170, 300, 310 |
| DBX | 010, 011, 240 | | |
| Dimensia | 300 | | |
| Emerson | 003, 051, 080, 081, 135, 136, 243, 250 | Realistic | 005, 009, 130, 137, 210, 241 |
| | | | |
| Fisher | 005, 007, 008, 009 | Samsung | 002, 004, 220 |
| Funai | 081, 136, 137 | Sansui | 081, 136, 240 |
| GE | 130, 170, 300 | Sanyo | 005, 009 |
| Goldstar | 006 | Scott | 001, 002, 004, 009, 081, 136, 230, 241, 330, 340 |
| Go Video | 220 | | |
| Hitachi | 000, 125, 300, | | |
| Instant Replay | 125, 130, | Sears | 000, 005, 006, 007, 008, |
| Jensen | 240 | | |
| JVC | 010, 011, 190, 240 | Shaintom | 050 |
| Kenwood | 006, 010, 011, 240 | Sharp | 200, 210 |
| LXI | 000, 005, 006, 007, 008, 009, 137 | Signature2000 | 137, 200 |
| | | Singer | 050 |
| Magnavox | 025, 130, 150 | Sony | 140, 141, 142 |
| Marantz | 010, 011, 240 | SV2000 | 137 |
| Marta | 006 | Sylvania | 125, 130, 137, 150 |
| Memorex | 009, 130 | Symphonic | 137 |
| MGA | 230, 241, 242, 243, 330, 340 | Tashiro | 006 |
| | | Tatung | 010, 011, 240 |
| Minolta | 000, 300 | Teac | 010, 011, 137, 240 |
| Mitsubishi | 230, 241, 242, 243, 330, 340 | Technics | 100, 101, 125, 130 |
| | | Teknika | 130, 137 |
| Multitech | 004, 137, 330 | Toshiba | 001, 310 |
| NEC | 010, 011, 190, 240 | Vector Research | 011 |
| Olympic | 125, 130 | Wards | 006, 009, 200, 210, 290 |
| Optimus | 006, 200, 100, 140 | | |
| Orion | 081, 136 | Yamaha | 005, 010, 011, 240 |
| Panasonic | 100, 101, 125, 130 | Zenith | 290 |
| Penney | 000, 005, 010, 011, 130, 240, 300 | | |

# Cable Converter Box and CD Players Infrared Codes Index (For CT–27G22/U and CT–27S21)

The Universal Infrared Remote Control is capable of operating many brands of Cable Converter Boxes and CD Players. Refer to the Programming the Remote Control section for procedures.

**Note:** The Universal Remote Control memory is limited; therefore, some models of Cable Converter Boxes and CD Players may not operate. The Universal Remote Control is not designed to control all features that are available in all models.

**Note:** After entering the proper infrared code, press the Remote **CBL** Selection Mode button (☆). Then refer to the Remote Control Key Functions section, for Remote CBL function key listing.

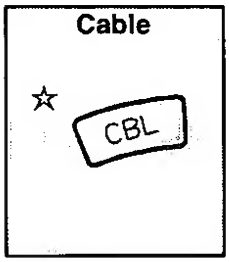


## Codes for Cable Converter Box

| Brand of Cable–TV Box | Code(s) | Brand of Cable–TV Box | Code(s) |
|---|---|---|---|
| ABC | 530 | Philips | 006, 007, 540, 541, 542 |
| Archer | 531, 544 | Pioneer | 001, 260 |
| Cableview | 005, 544 | Pulsar | 005, 544 |
| Citizen | 005, 522 | Puser | 544 |
| Curtis | 130, 131 | RCA | 170, 220 |
| Diamond | 530, 531, 544 | Realistic | 544 |
| Eagle | 541 | Regal | 130, 350, 720, 730, 731, 900 |
| Eastern | 560 | Regency | 560 |
| Gcbrand | 005, 544 | Rembrandt | 005, 544, 702 |
| Gemini | 522 | Samsung | 005 |
| General Instrument | 122, 360, 520, 521, 522, 530, 531, 532, 533 | Scientific Atlanta | 122, 130, 131 |
| Hamlin | 130, 350, 720, 730, 731, 900 | Slmark | 001, 005 |
| Hitachi | 003, 530 | Sprucer | 005, 121 |
| Jerrold | 122, 360, 520, 521, 522, 530, 531, 532, 533 | Stargate | 005, 544 |
| Macom | 003, 004, 005 | Teleview | 001, 005 |
| Memorex | 542 | Texscan | 810 |
| Movietime | 005, 544 | Tocom | 700, 701 |
| Oak | 002, 702, 710 | Toshiba | 004 |
| Panasonic | 120, 121, 132 | Unika | 531, 544 |
| Paragon | 281 | Universal | 522, 544 |
| | | Videoway | 006 |
| | | Viewstar | 541, 542 |
| | | Zenith | 000, 280, 281 |
| | | Zenith/Drake Satellite | 000 |

**Note:** After entering the proper infrared code, press the Remote **CD** Selection Mode button (☆☆). Then refer to the Remote Control Key Functions section, for Remote CD Players function key listing.

## Codes for CD Players

| Brand of CD Players | Code(s) | Brand of CD Players | Code(s) |
|---|---|---|---|
| Admiral | 110 | Optimus | 030, 057, 059, 061 |
| Aiwa | 162, 164 | Panasonic | 100, 101, 130 |
| Carver | 150, 151 | Philips | 150, 151 |
| Denon | 200 | Pioneer | 030 |
| Emerson | 172 | Quasar | 100, 101, 130 |
| Fisher | 005 | RCA | 160, 170, 171, 500 |
| Garrard | 057 | Sansui | 032, 050, 320 |
| Harman/Kardon | 059, 060 | Sanyo | 005 |
| Hitachi | 007 | Scott | 032, 050, 320 |
| Jensen | 163 | Sharp | 200, 201 |
| JVC | 190, 191, 270 | Sherwood | 059 |
| Kardon | 058 | Sony | 140 |
| Kenwood | 000, 001, 050, 270 | Soundesigh | 220 |
| LXI | 165 | Teac | 051, 055, 057 |
| Magnavox | 150, 161 | Technics | 100, 101, 130 |
| Marantz | 151 | Victor | 190, 191, 270 |
| Mcntosh | 060 | Yamaha | 002, 003, 004 |
| Nakamichi | 032 | | |
| Onkyo | 053, 054 | | |

# Cassette Deck, Receivers, and Amplifiers Infrared Codes Index (For CT-27G22/U and CT-27S21)

The Universal Infrared Remote Control is capable of operating many brands of Cassette Deck, Receivers, or Amplifiers. Refer to the Programming the Remote Control section for procedures.

**Note:** The Universal Remote Control memory is limited; therefore, some models of Cassette Deck, Receivers, and Amplifiers may not operate. The Universal Remote Control is not designed to control all features that are available in all models.

**Note:** After entering the proper infrared code, press the Remote **AUX** Selection Mode button (*). Then refer to the Remote Control Key Functions section, for Remote Cassette Deck function key listing.

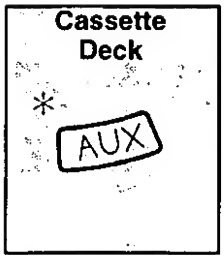


## Code Index for Cassette Deck

| Brand of Cassette Deck | Code(s) | Brand of Cassette Deck | Code(s) |
|---|---|---|---|
| Aiwa | 760, 761, 762 | Philips | 751 |
| Denon | 800 | Pioneer | 630 |
| Fisher | 603 | RCA | 763, 770, 771 |
| Jensen | 657 | Sansui | 631, 653 |
| JVC | 780, 781 | Sharp | 800 |
| Kenwood | 600, 650 | Sony | 740 |
| Marantz | 751 | Teac | 653, 654 |
| Nakamichi | 631 | Technics | 700, 701, 730 |
| Onkyo | 651, 652, 656 | Yamaha | 601, 602 |
| Panasonic | 700, 701, 730 | | |

**Note:** After entering the proper infrared code, press the Remote **RCVR** Selection Mode button (**). Then refer to the Remote Control Key Functions section, for Remote Receivers/Amplifiers function key listing.

## Code Index for Receivers and Amplifiers

| Brand of Receiver / Amplifier | Code(s) | Brand of Receiver / Amplifier | Code(s) |
|---|---|---|---|
| Admiral | 110 | Panasonic | 100, 101, 130 |
| Aiwa | 160, 161 | Philips | 150 |
| Denon | 200, 201, 202 | Pioneer | 030, 032 |
| Fisher | 004 | Quasar | 100, 101, 130 |
| Garrard | 055 | RCA | 003, 130, 162, 170, 171 |
| Harman | 150, 057 | Sansui | 003, 053, 320 |
| Jensen | 164 | Sharp | 200, 203 |
| JVC | 190, 191 | Sony | 140 |
| Kenwood | 000, 050 | Soundesign | 220 |
| Magnavox | 162 | Teac | 053, 054, 055 |
| Marantz | 151 | Technics | 100, 101, 130 |
| Mcintosh | 058 | Victor | 190, 191 |
| Nakamichi | 031 | Yamaha | 001, 002 |
| Onkyo | 151, 156 | | |
| Optimus | 003, 162, 170, 171 | | |

# Laser Disc, DSS (Digital Satellite System), and DVD (Digital Videodisc) Infrared Codes Index (For CT–27G22/U and CT–27S21)

The Universal Infrared Remote Control is capable of operating selected brands of Laser Disc, DSS Digital Satellite System, and DVD (Digital Videodisc). Refer to the Programming the Remote Control section for procedures.

**Note:** The Universal Remote Control memory is limited; therefore, some models of Laser Disc, DSS Digital Satellite System, and DVD (Digital Videodisc) may not operate. The Universal Remote Control is not designed to control all features that are available in all models.

**Note:** After entering the proper infrared code, press the Remote **LD** Selection Mode button (◇). Then refer to the Remote Control Key Functions section, for Remote Laser Disc function key listing.

**Codes for Laser Disc**

| Brand of Laser Disc | Code(s) | Brand of Laser Disc | Code(s) |
|---|---|---|---|
| Denon | 370 | Quasar | 100, 101, 135, 380 |
| Hitachi | 000 | RCA | 370 |
| Kenwood | 002, 003 | Samsung | 160 |
| Marantz | 370 | Sanyo | 370 |
| Mitsubishi | 370 | Sharp | 200 |
| NEC | 370 | Sony | 140, 141, 142, 143 |
| Panasonic | 100, 101, 135, 380 | Teac | 370 |
| Phillips | 150 | Toshiba | 370 |
| Pioneer | 370 | Yamaha | 001 |
| Proscan | 370 | | |

**Note:** After entering the proper infrared code, press the Remote **DSS** Selection Mode button (◇◇). Then refer to the Remote Control Key Functions section, for Remote DSS function key listing.

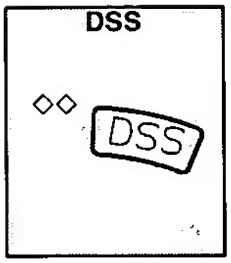


**Codes for DSS (Digital Satellite System)**

| Brand of Satellite | Code(s) |
|---|---|
| GE | 170 |
| Panasonic | 100 |
| RCA | 170 |
| Sony | 390 |

**Note:** After entering the proper infrared code, press the Remote **AUX** Selection Mode button (★). Then refer to the Remote Control Key Functions section, for Remote DVD function key listing.

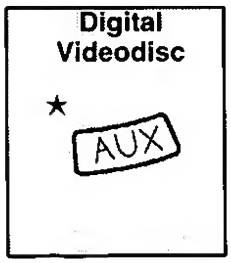


**Codes for DVD (Digital Videodisc)**

| Brand of DVD | Code(s) |
|---|---|
| Panasonic | 102 |

# Troubleshooting Chart

Before you call for service, determine the symptoms and make a few simple checks shown below.

| Symptoms | | Check |
|---|---|---|
| **Picture** | **Sound** | |
| SNOWY PICTURE | NOISY SOUND | – ANTENNA LOCATION AND/OR CONNECTION |
| MULTIPLE IMAGE | NOISY SOUND | – ANTENNA DIRECTION AND/OR LOCATION<br>– ANTENNA LEAD–IN WIRE |
| INTERFERENCE | NOISY SOUND | – ELECTRICAL APPLIANCES, LIGHTS, CARS AND TRUCKS<br>– DIATHERMY AND OTHER MEDICAL EQUIPMENT |
| NORMAL PICTURE | NO SOUND | – VOLUME CONTROL SETTING<br>– MUTE CONTROL (IF APPLICABLE)<br>– TRY ANOTHER CHANNEL<br>– TV SPEAKERS SWITCH (IF APPLICABLE) IN THE OFF POSITION |
|  NO VIDEO | NOISY SOUND | – TV OR CABLE TUNING MODE SET TO PROPER SETTING<br>– ANTENNA INPUT CORRECT (IF APPLICABLE) |
| NO PICTURE | NO SOUND | – CHECK THAT AC POWER LINE IS PLUGGED INTO AC OUTLET<br>– BRIGHTNESS & AUDIO CONTROLS SET PROPERLY<br>– TRY ANOTHER CHANNEL |
| NO COLOR | NORMAL SOUND | – COLOR CONTROL SETTINGS<br>– TRY ANOTHER CHANNEL |
| BLACK PICTURE | NO SOUND | – RECEIVER IN VIDEO MODE WITH NO SIGNAL |

## Power Loss

**Prolonged power interruption causes the following features to reset to their factory preset state.**

| FEATURE | FACTORY PRESET STATE | FEATURE | FACTORY PRESET STATE |
|---|---|---|---|
| POWER | OFF | CLOCK | NOT SET |
| AUTO POWER ON | NO CHANGE | SLEEP TIMER | OFF |
| VOLUME | APPROX.–1/3 | PROGRAM TIMER | OFF |
| CHANNEL | CH 03 | ANTENNA MODE | CABLE |
| PROGRAM MEMORY | UNPROGRAMMED | TV/VIDEO | TV |
| VIDEO MENUS | NORMALIZED | PIP FEATURE | OFF |
| STEREO/SAP/MONO | STEREO | TRILINGUAL MENU | ENGLISH |

**Panasonic Consumer Electronics Company, Division of Matsushita Electric Corporation of America**
One Panasonic Way
Secaucus, New Jersey 07094

**Panasonic Sales Company, Division of Matsushita Electric of Puerto Rico Inc. ("PSC")**
Ave. 65 de Infanteria, Km 9.5
San Gabriel Industrial Park
Carolina, Puerto Rico 00985
Tel. (787) 750–4300
FAX. (787) 768–2910

**Panasonic Canada Inc.**
5770 Ambler Drive
Mississauga, Ontario L4W 2T3
Canada